



Supported Equipment Manual

For the M7140 Device Manufactured by American Microsystems, Ltd.

Copyright © 1996 - 2006 by Connect, Inc.

All rights reserved. This document may not be reproduced in full or in part, in any form, without prior written permission of Connect, Inc. 1701 Quincy Avenue, Suites 5 & 6, Naperville, IL 60540.

Connect, Inc. makes no representation or warranties with respect to the contents of this document and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. Further, Connect, Inc. reserves the right to revise this publication and to make changes to it from time to time without obligation to notify any person or organization of such revision or changes.

Trademarks

PowerNet OpenAir™, OpenAir Linux™, OpenAir Windows™, OpenAir 400™, PowerNet Twin Client™, and PowerNet AirLinc™ are trademarks of Connect, Inc.

Other product names mentioned in this manual may be trademarks or registered trademarks of their respective companies and are hereby acknowledged.

Production

This manual was written, edited, and produced by:

Connect, Inc.
1701 Quincy Avenue,
Suites 5 & 6,
Naperville, IL 60540
www.connectrf.com

Printed in the U.S.A.

Please let us know about any errors in this document at:

<http://207.241.78.223/isoexpert/calltrak.nsf/WebTracking?OpenForm>

Table of Contents

Chapter 1 • Introduction.....	1-1
Description.....	1-1
Picture.....	1-1
Setup Requirements.....	1-2
Accessories.....	1-2
Linux Kernel.....	1-2
Release Notes.....	1-2
Chapter 2 • Terminal Setup.....	2-1
Installation.....	2-1
Running the Manager.....	2-3
Quick Start.....	2-4
Configuring the Manager.....	2-4
Booting the Terminal.....	2-11
Starting a Telnet Session.....	2-12
Standard Setup.....	2-13
Setup Using Twin Client Manager.....	2-13
Using Terminal Menus.....	2-19
Authorizing PowerNet.....	2-22
Software Management.....	2-27
Airloader Auto-Configuration.....	2-27
Mobile Device Manager (MDM) Features.....	2-32
Downloading Files.....	2-42
Chapter 3 • Keypad Configuration.....	3-1
Diagrams.....	3-1
Table.....	3-5
Chapter 4 • Error Message Resolution Guide.....	4-1

This page is intentionally blank.

Chapter 1 • Introduction

Description

The AML M7140 is a programmable stationary terminal for fixed station, wired, or wireless industrial data collection applications. The M7140 features a standard Intel StrongARM® processor, Compact Flash card slot, and 10 BaseT Ethernet connectivity. Extensive I/O interfaces include two RS-232 ports for bar code scanners or other serial devices, three optically isolated inputs, and three relay contact outputs for integration with PLCs, conveyors, scales, and alarm devices.

The M7140 Stationary terminal has a rugged powder-coated steel enclosure, 77-key elastomeric keypad, a ¼ VGA backlit LCD display, an internal speaker, 32MB DRAM memory, 16MB Flash ROM, and compact Flash storage up to 32MB. The M7140 stationary terminal integrates easily and quickly into a wide range of computing environments. Each M7140 comes pre-loaded with VT100/220 terminal emulation, a TELNET client, FTP server, and an HTTP server. Optional software tools provide support for Windows® ODBC and OLE DB data sources, or C++ development under Linux®.

More information about M7140 terminal features can be found at www.amltd.com.

Picture



Setup Requirements

Installation requires, at a minimum, the following:

- an Intel 80386 or 80486 CPU
- 32 megabytes of RAM
- AT-standard (16-bit) hard drive controller

Accessories

Accessories for the M7140 terminals include:

- Commandlink™ Application Development Suite
- Radio Card - 11 Mbps Wireless

Linux Kernel

Version of the Linux Kernel

The version of the Linux kernel on the M7140 terminal is 2.4.19. (The RAM disk image version is 1.0.0 and the AML bootloader version is 1.2.1-DT.)

Finding the Version of the Linux Kernel

The version of the Linux kernel will appear on a terminal screen when the terminal is rebooted. For rebooting instructions, see the *Booting the Terminal* section of *Quick Start*.


Release Notes

1. After download (either using a serial cable or changing emulation using Airloader), the terminal **MUST** be rebooted for changes to take effect.
2. The Scanner tab is not relevant for the M7140.
3. The Scan/Decoder object is not functional for the M7140.


Chapter 2 • Terminal Setup

Installation


The InstallShield wizard runs and presents the following screen.

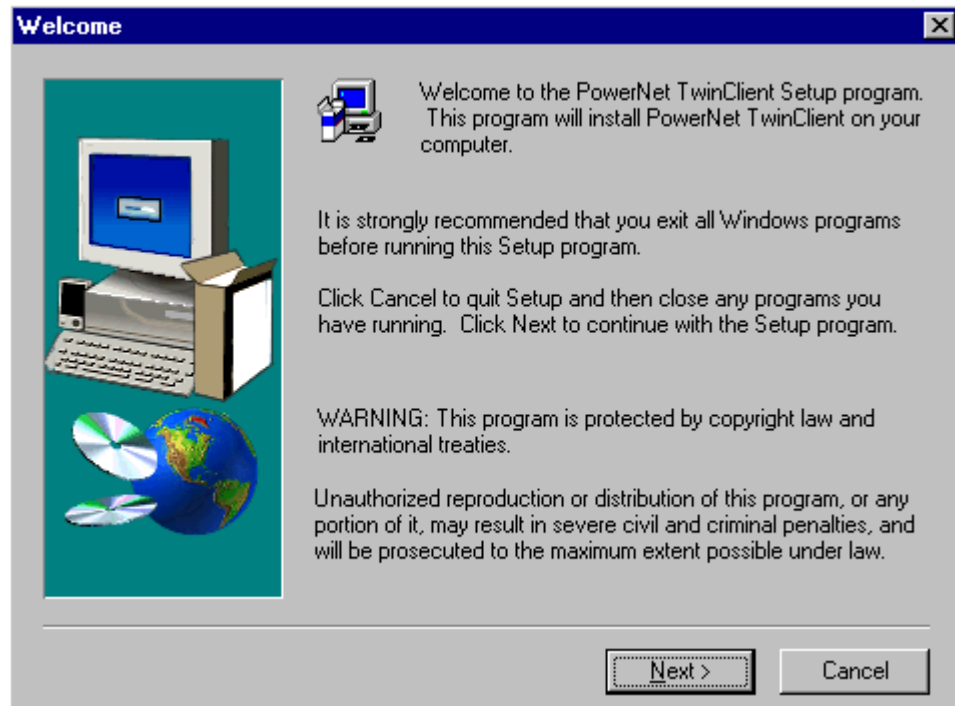


Click on **Next** to begin the installation process.

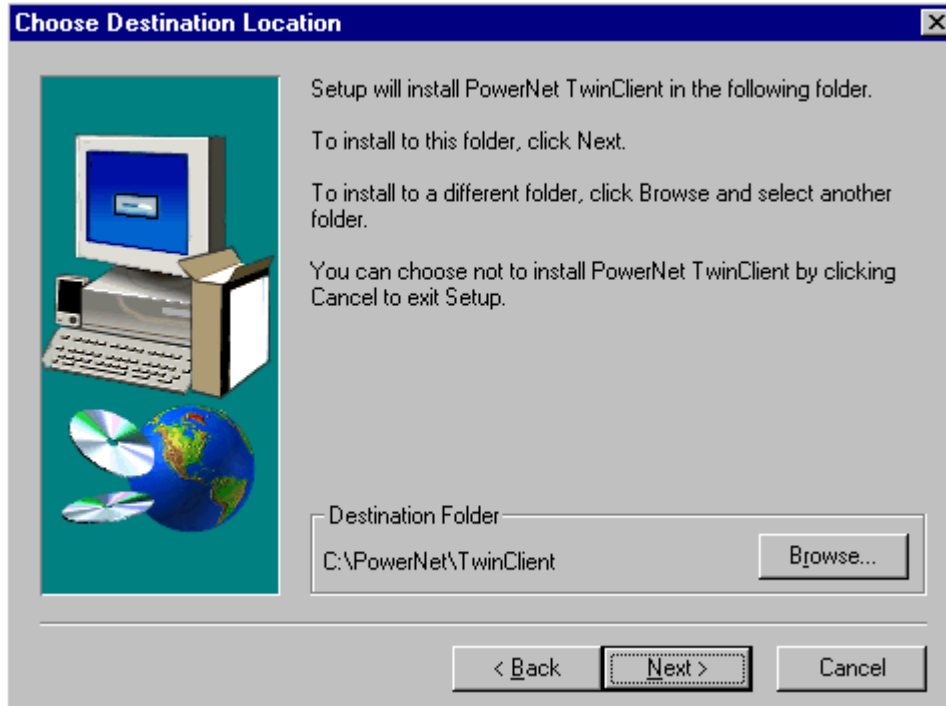

To change the default Destination Location, click on **Browse** and select a location. Then click on **Next**.

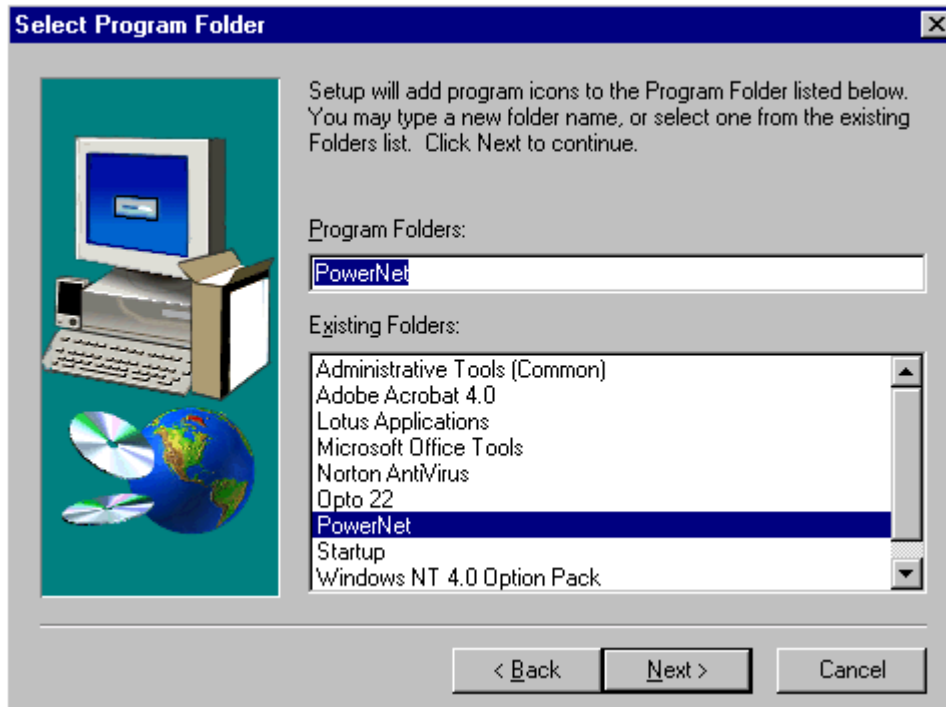

The default folder is **PowerNet**. This default may be changed either by selecting an existing program group or by typing in a new name at the prompt. Then click on **Next**.

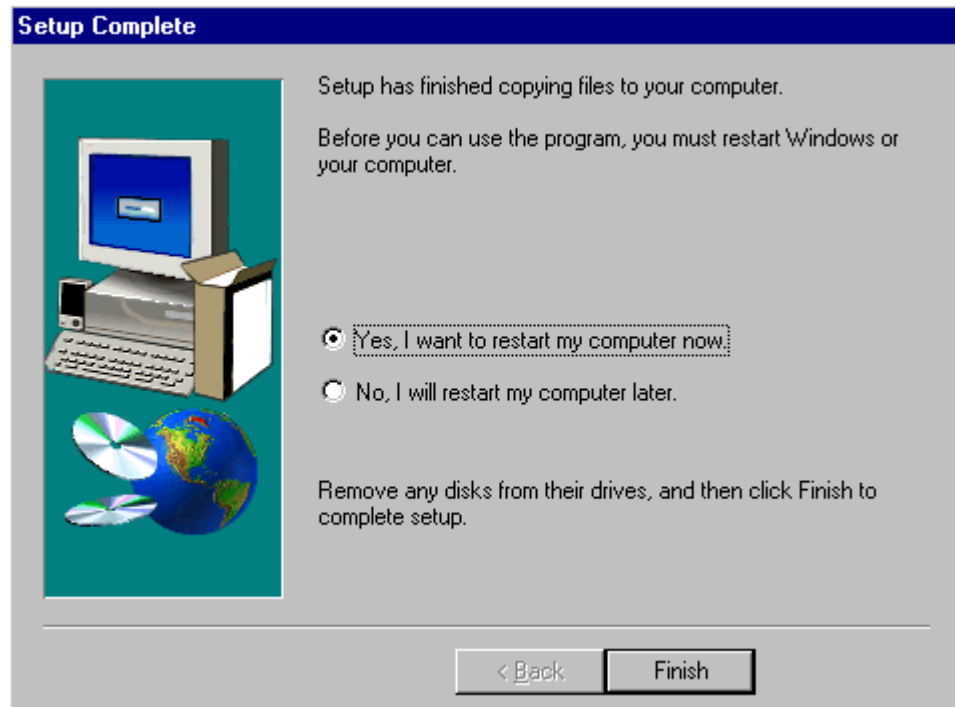

When the installation is complete, reboot the system to initialize the Twin Client software.

- a. To reboot the system immediately, click on **Finish**.
- b. To reboot later, click on the option to restart the computer later, and click on **Finish**.

Running the Manager

The PowerNet Twin Client Manager is the utility that manages the terminal software and configurations.

Select **Start**, **Programs**, **PowerNet**, and **Twin Client Manager**. The PowerNet Twin Client Manager screen appears as shown in the following figure. This is the administrator's main screen, and all functions are accessed from its menu bar, toolbar, and tabs.

Menu Bar

The menu bar provides access to the functions used to configure the terminals and manage their software.



Toolbar

Found under the menu bar, the toolbar provides shortcuts to major features. The toolbar can be turned on or off by changing the Toolbar parameter found on the **View** menu. The shortcuts available from the toolbar are as follows.



Create a new terminal configuration.



Open an existing terminal configuration.



Save the current terminal configuration.



Download the configuration to the terminal.



Download software to the terminal.



Configure terminals automatically over the wireless network.



View the PowerNet Twin Client Manager version.

The PowerNet Twin Client Manager is now successfully installed and ready for use. The next section provides detailed instructions for quickly configuring the terminal and starting a Telnet session.

Quick Start

Configuring the Manager


The first step is to configure the Twin Client Manager to meet site-specific requirements, and then prepare it for the automatic management of the terminal software and IP addresses. This simple procedure will require only a few minutes to complete.

Setting the Emulation

Click on **Start**, **Programs**, **PowerNet**, and **Twin Client Manager**. Select the **Settings** menu, as shown below.



Click on **Emulation**, select the desired emulation, and click on **OK**.

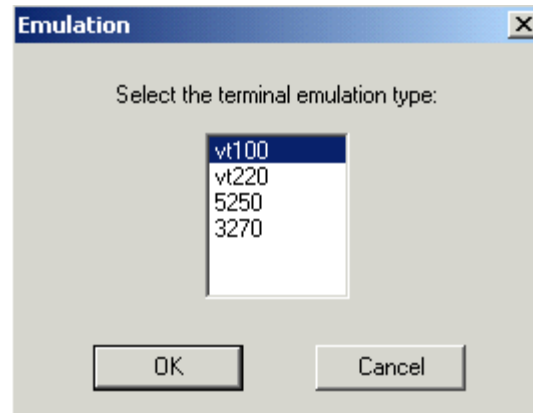


Setting the Servers


The Servers are the Telnet host systems the terminals will access. To set these addresses from the **S**ettings menu, click on **S**ervers.




Click on **A**dd.

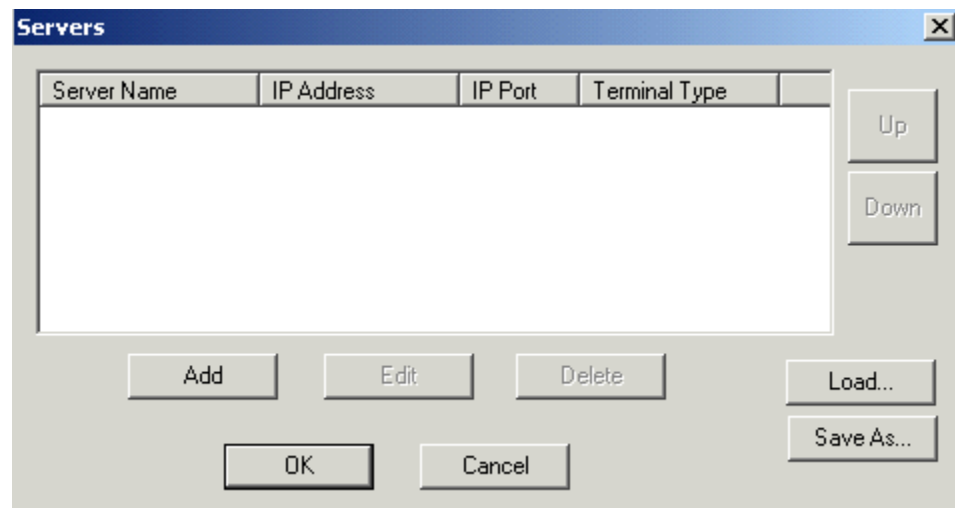

Enter the name of each server, its IP address and IP port (normally 23 for Telnet servers), and emulation type.

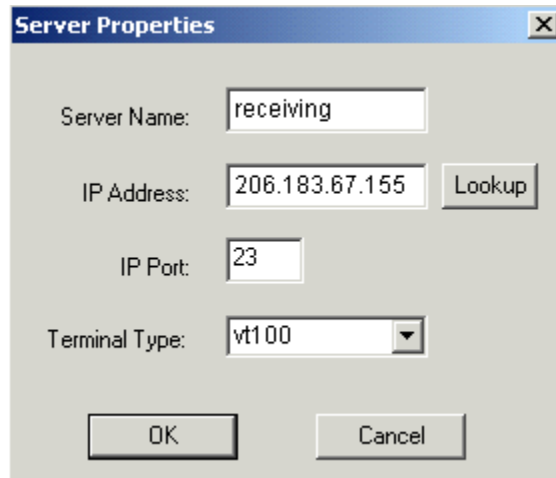


Click on **OK**.

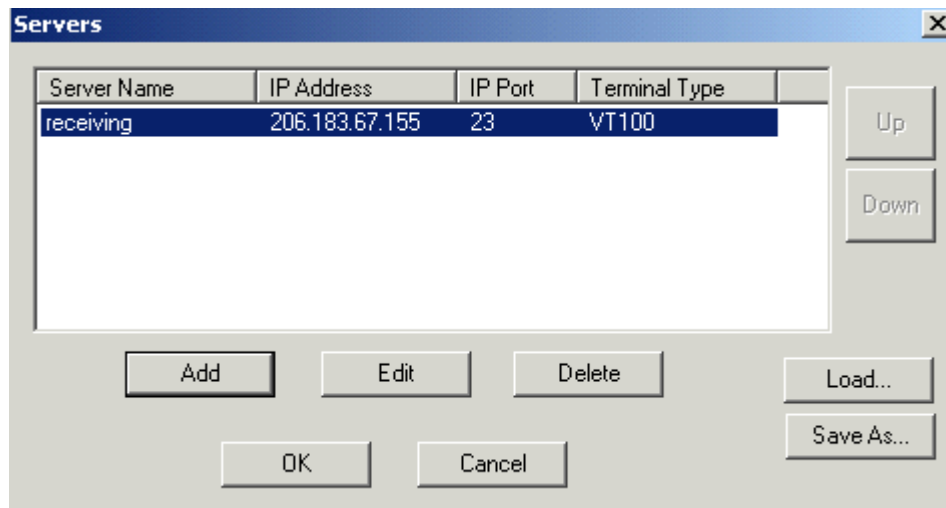


Click on **OK** again in the next screen. Repeat this step for each Telnet server the terminals are required to access. If an error is made in the name, IP address, IP port number, or terminal emulation type, click on the line that is in error and then click on the **Edit** button to make the corrections.

Setting Terminal Operations

In the Twin Client menu under **S**ettings, choose **T**erminal Operation.

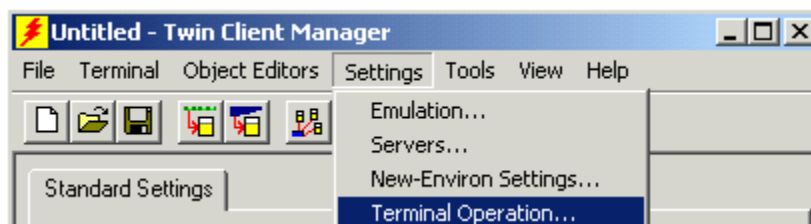


Run Airloader on terminal can be selected, and the Airloader server IP address can be entered.

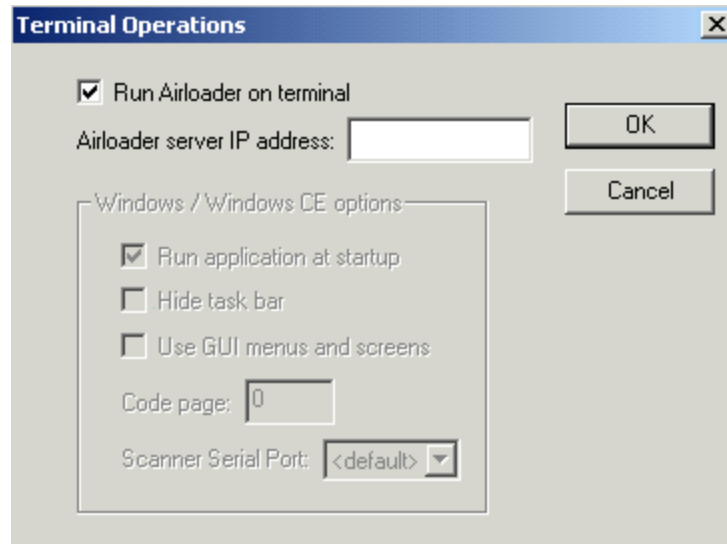


Click on **OK** when finished.

Setting Terminal Model

Under **Settings**, choose the **Options** menu as shown.

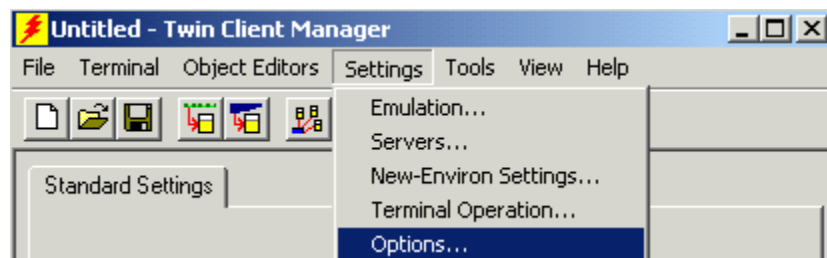


Select **M7140** and choose **OK**.

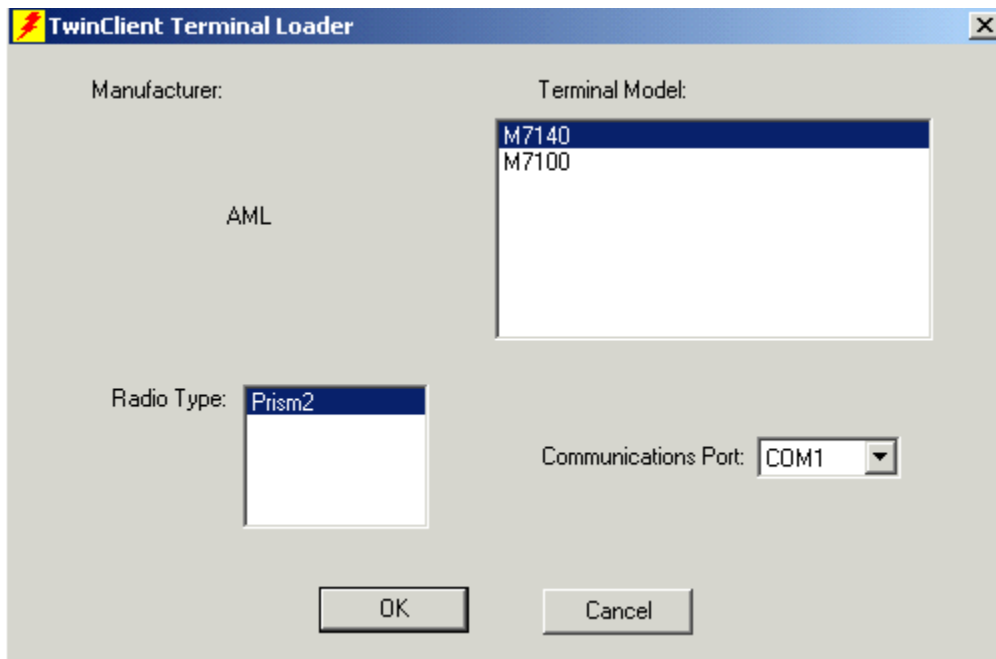


Saving the Configuration

Click on **F**ile and **S**ave **A**s. Enter a name for this configuration.

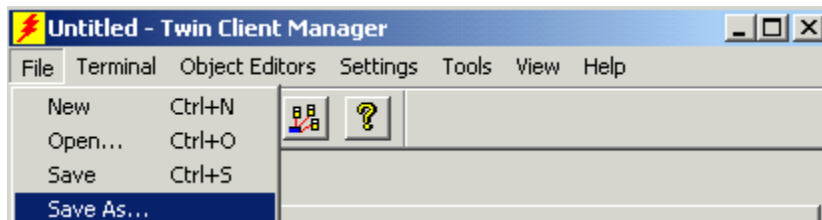


For the purposes of this example, the name is vt100.

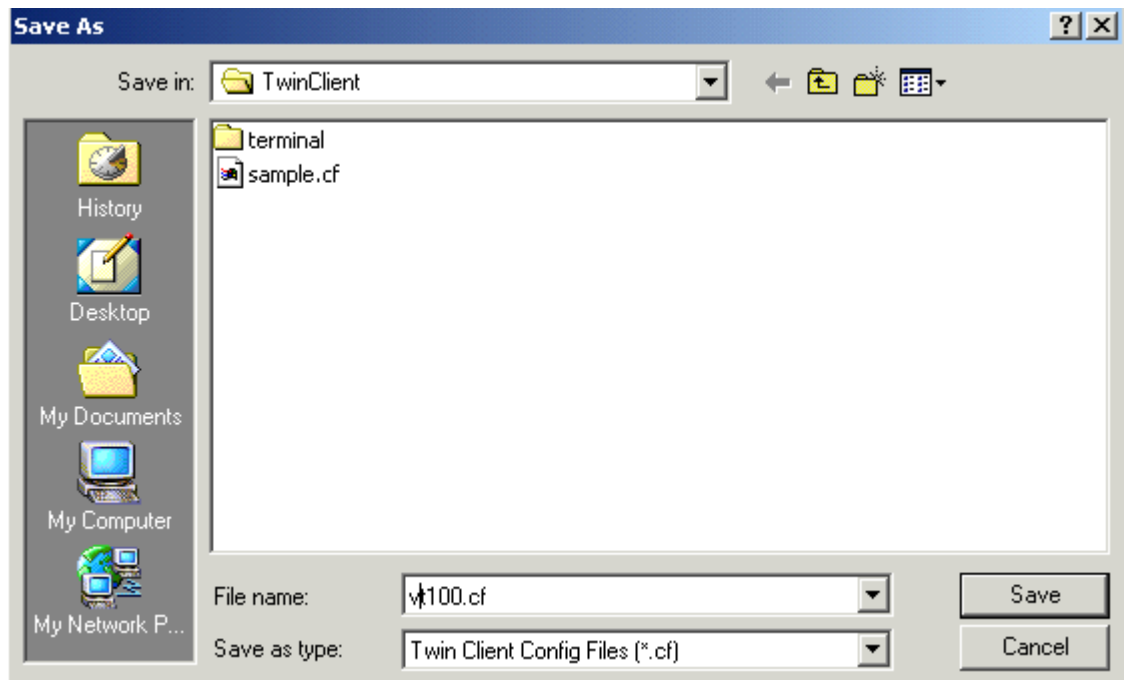

Setting Airloader Auto-Configuration


The configuration download and IP address assignment for each terminal will take place automatically by setting the Airloader Auto-Configuration options.

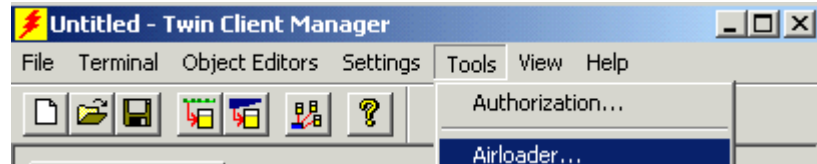

Click on the **Airloader** option in the **Tools** menu.


Note: If the Airloader Auto-Configuration window does not display the options, click on the **Advanced**<< button.

If multiple network adapters are installed on the PC, ensure that the desired network adapter is selected. The adapter selection can be changed by clicking on the **Change** button.

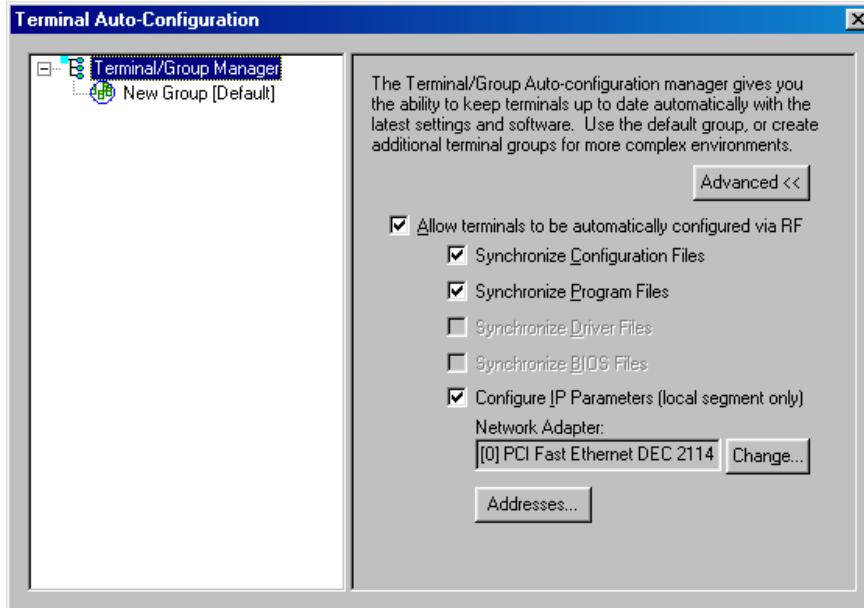

This powerful software management tool is described in detail in the *Airloader Auto-Configuration* section of *Software Management*. For now, it is sufficient simply to use it for assignment of the initial terminal configuration and IP address, both of which can be easily changed later. Ensure that all of the check boxes are checked as shown above.


To assign terminal IP addresses automatically over the wireless network, check all of the boxes as shown above. Then click on the **Addresses** button and enter the desired range in the **From** and **To** boxes as shown in the following figure.

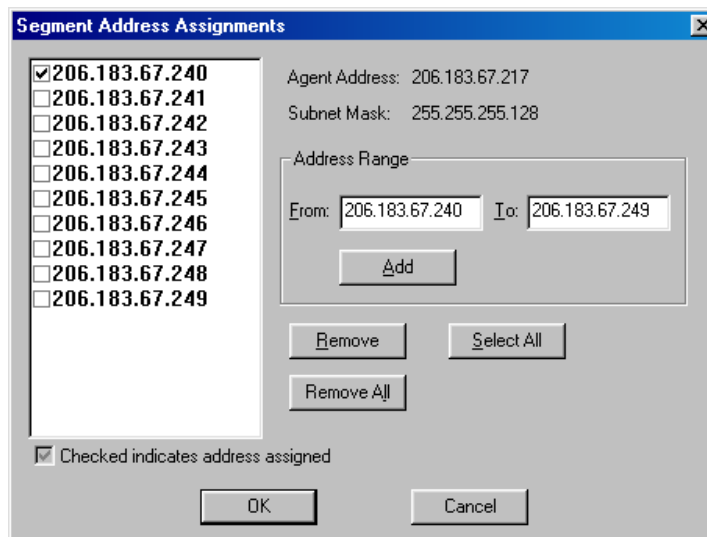


After setting the address range, click on **OK** to return to the Airloader Auto-Configuration screen.



Click on the **+** sign in front of **Terminal/Group Manager** to access the default terminal group. Next, click on the **New Group** icon and use the **Browse** button to select the configuration file saved earlier.

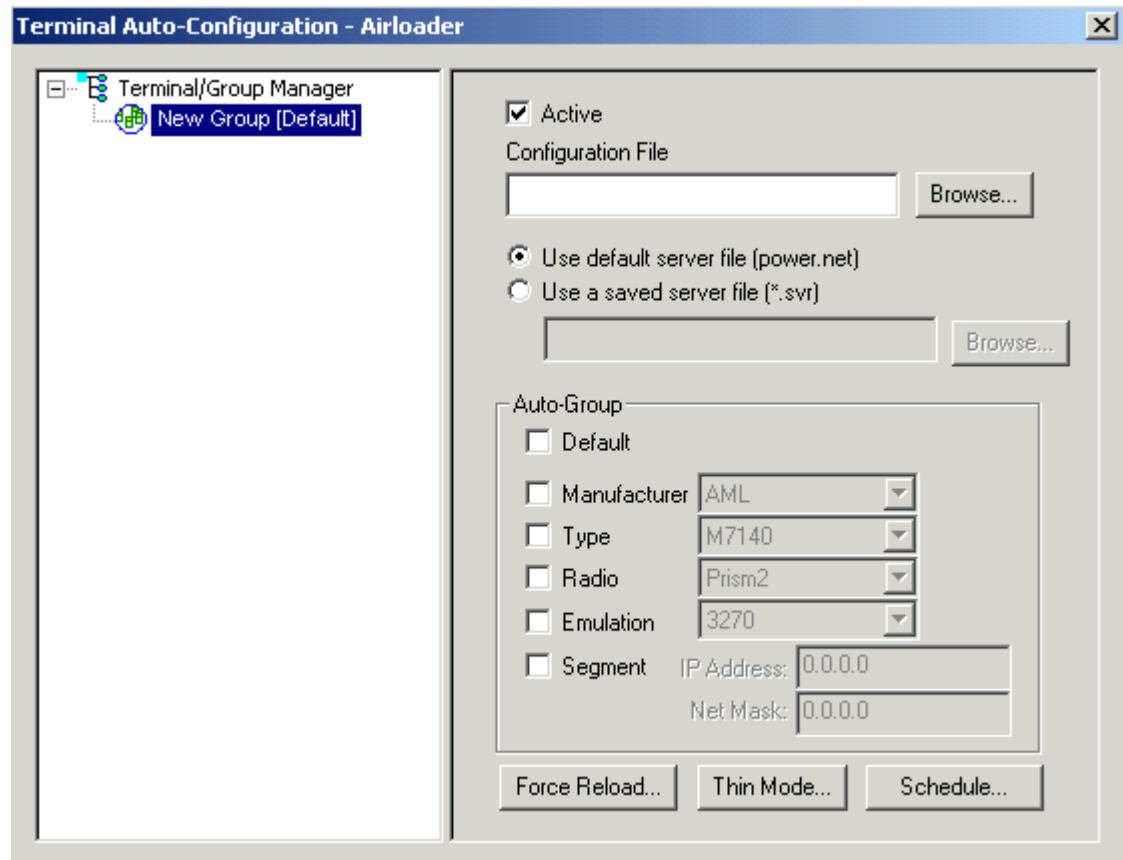

Check the **Active** box, and the system is now configured to automatically download IP addresses, software, and configuration files to the terminals. Click on the  box at upper right corner to return to the main menu.

Note: The software does not need to be authorized now. It can be authorized later, after a Telnet session has been established. The procedure is described in *Authorizing PowerNet* under *Standard Setup*.

Booting the Terminal

To boot the terminal, hold the power key till the terminal goes Off and then power On.

Starting a Telnet Session

At the Twin Client main menu on the terminal, press any key to establish the connection. Until the terminal has been authorized, the following screen is displayed.

```
RECOVERABLE ERROR
Terminal not
Authorized for
Twin Client

Keypress to continue...
```

It is not necessary to authorize the terminal at this time, so press any key to continue. The terminal will establish a connection with the host system and start emulation. If the terminal fails to connect to the host, refer to the following tables for the possible causes and the related corrective actions.

Failure Cause	Corrective Action
Incorrect Host IP address	Correct the Host List address on the terminal. Refer to <i>Using Terminal Menus</i> under <i>Standard Setup</i> .
Incorrect netmask value	Correct the netmask value. Refer to <i>Using Terminal Menus</i> .

Error Indication	Possible Cause	Corrective Action
NOT Associated	Invalid NETID	Run current radio setup program and set NETID to match the access point. See <i>Using Terminal Menus</i> .
Unable to open connection	IP stack on terminal failed to load.	Reload Program Files and reboot.
Timeout waiting for data	Transient communications failure	Reboot terminal. If problem persists, check the RFSYNC.log in the PowerNetTN directory.
Download aborted	Socket closed during download	Ensure that PC is operating. Reboot terminal and retry.

After a Telnet session has been successfully established, the terminal will remain in session for a maximum of 30 minutes at a time until it has been authorized. Once authorized, there is no software restriction on the session time. The instructions for authorizing the terminal are presented in the *Authorizing PowerNet* section of *Standard Setup*.

Standard Setup

Setup Using Twin Client Manager


The Twin Client Manager provides a **Standard Settings** tab for automatic setup of the terminals. The options within this tab vary according to the emulation selected, each of which is described below.

VT Settings


Select the VT emulation setup by clicking on the **Settings** menu and then the **Emulation** menu, as shown below.



Then click on the **VT100** selection, as shown below.

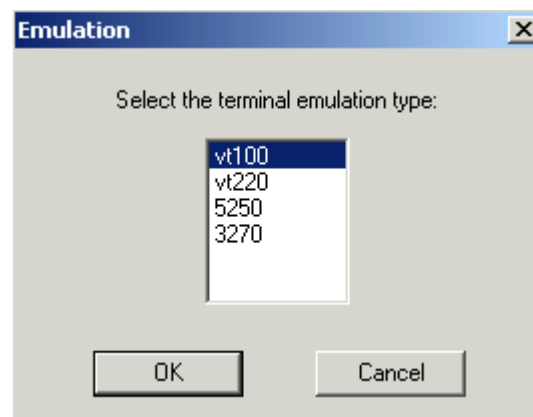

Click on **OK** after the selection is made, and return to the main Twin Client Manager menu. The Standard Settings tab will now reflect the settings for VT emulation.

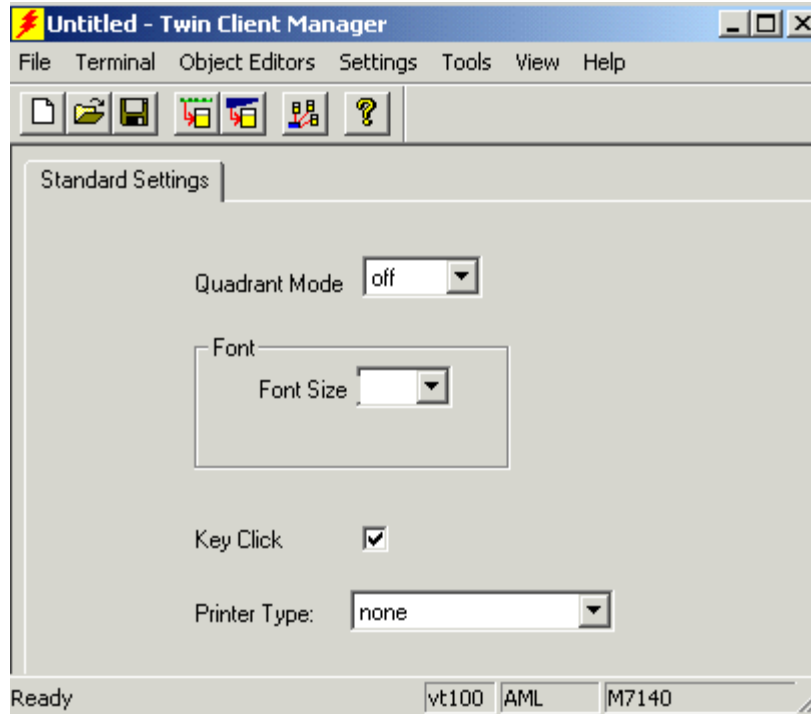

Quadrant Mode

The scrolling list option defines the rules by which the terminal display is positioned in the larger host display. As defined by Twin Client, quadrants are fixed position “windows” in the host display, and the terminal display is located on whatever quadrant contains the current cursor position.

Off disables quadrant processing and Twin Client simply centers the current host input field in the terminal display.

On enables quadrant processing. However, input fields that cross quadrant boundaries result in a shift to the left in order to locate as much of the current input field on the terminal display.

Soft always positions on a quadrant boundary regardless of input field boundaries. Viewing keys are enabled.

Hard is the same as **Soft** except the viewing keys are disabled.

Lock locks the terminal display origin (upper left corner) to fixed row and column (x,y) coordinates in the host display. The coordinates are zero-based.

Font

The Font Size scrolling list option offers a choice of size 10, 14, 16, 18, or 20 font.

Key Click

This check box enables (checked) or disables (unchecked) audible key clicks from the terminal. The default value is **on** (checked).

Printer Type


This scrolling list selects the attached printer type. The default value is **none**, indicating that no printer is attached.

5250 Settings


Select the 5250 emulation setup by clicking on the **S**ettings menu and then the **E**mulation menu, as shown below.



Then click on the **5250** selection, as shown below.

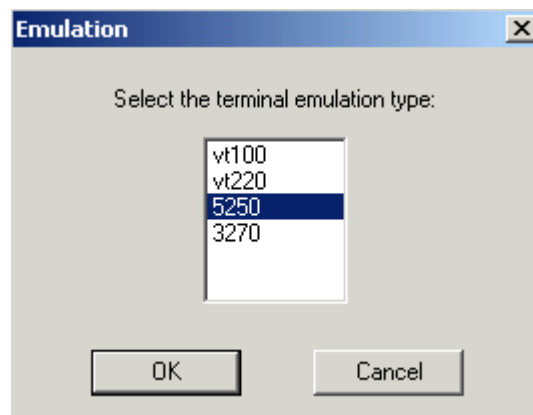

Click on **OK** after the selection is made, and return to the main Twin Client Manager menu. The Standard Settings tab will now reflect the settings for 5250 emulation.

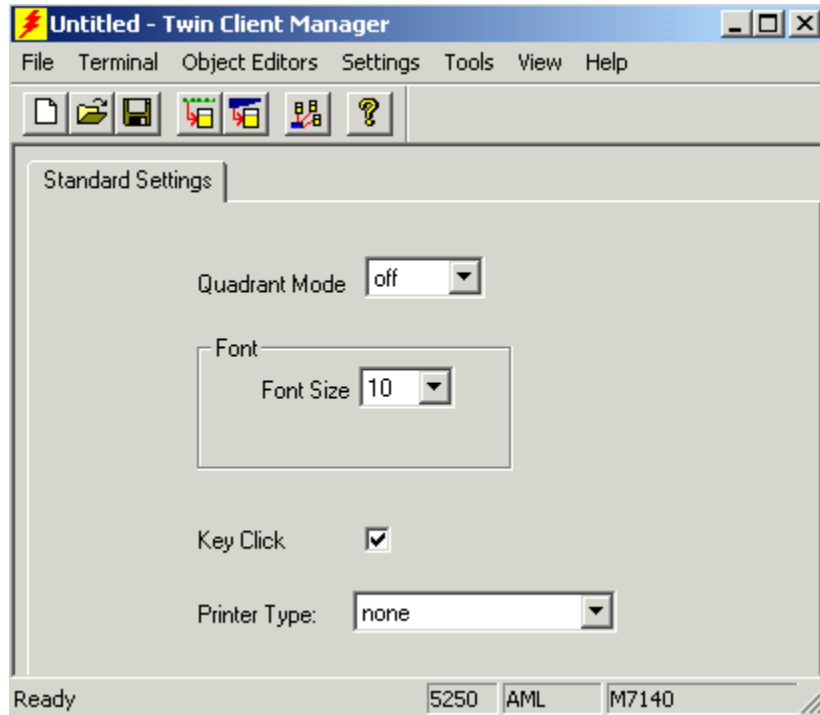

Quadrant Mode

The scrolling list option defines the rules by which the terminal display is positioned in the larger host display. As defined by Twin Client, quadrants are fixed position “windows” in the host display, and the terminal display is located on whatever quadrant contains the current cursor position.

Off disables quadrant processing and Twin Client simply centers the current host input field in the terminal display.

On enables quadrant processing. However, input fields that cross quadrant boundaries result in a shift to the left in order to locate as much of the current input field on the terminal display.

Soft always positions on a quadrant boundary regardless of input field boundaries. Viewing keys are enabled.

Hard is the same as **Soft** except the viewing keys are disabled.

Lock locks the terminal display origin (upper left corner) to fixed row and column (x,y) coordinates in the host display. The coordinates are zero-based.

Font

The Font Size scrolling list option offers a choice of size 10, 14, 16, 18, or 20 font.

Key Click

This check box enables (checked) or disables (unchecked) audible key clicks from the terminal. The default value is **on** (checked).

Printer Type


This scrolling list selects the attached printer type. The default value is **none**, indicating that no printer is attached.

3270 Settings


Select the 3270 emulation setup by clicking on the **S**ettings menu and then the **E**mulation menu, as shown below.



Then click on the **3270** selection, as shown below.

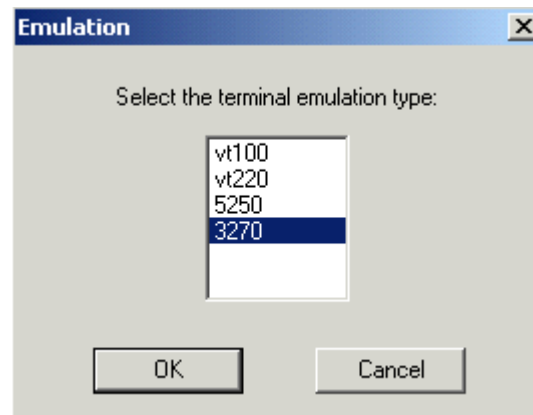

Click on **OK** after the selection is made, and return to the main Twin Client Manager menu. The Standard Settings tab will now reflect the settings for 3270 emulation.

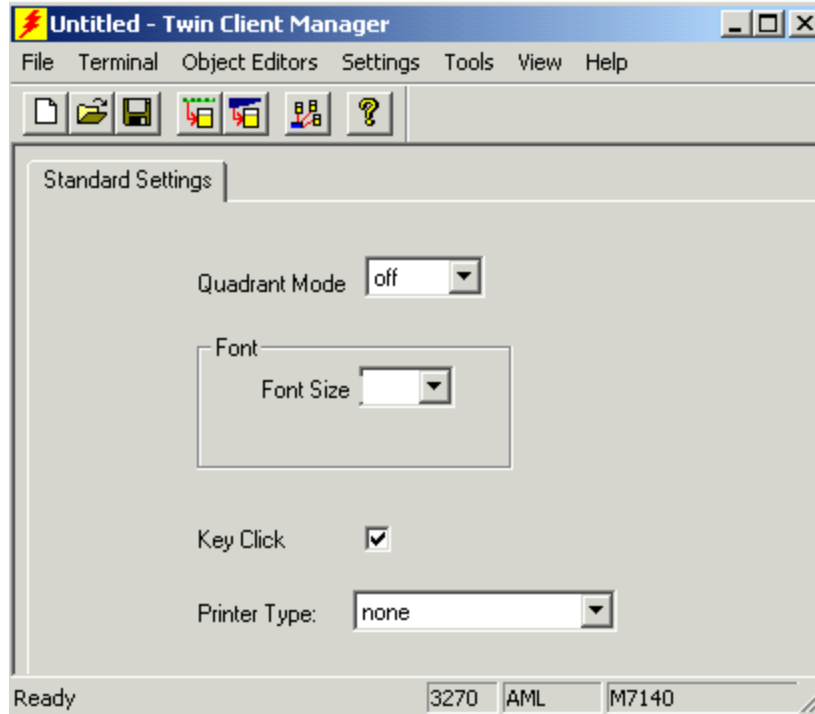

Quadrant Mode

The scrolling list option defines the rules by which the terminal display is positioned in the larger host display. As defined by Twin Client, quadrants are fixed position “windows” in the host display, and the terminal display is located on whatever quadrant contains the current cursor position.

Off disables quadrant processing and Twin Client simply centers the current host input field in the terminal display.

On enables quadrant processing. However, input fields that cross quadrant boundaries result in a shift to the left in order to locate as much of the current input field on the terminal display.

Soft always positions on a quadrant boundary regardless of input field boundaries. Viewing keys are enabled.

Hard is the same as **Soft** except the viewing keys are disabled.

Lock locks the terminal display origin (upper left corner) to fixed row and column (x,y) coordinates in the host display. The coordinates are zero-based.

Font

The Font Size scrolling list option offers a choice of size 10, 14, 16, 18, or 20 font.

Key Click


This check box enables (checked) or disables (unchecked) audible key clicks from the terminal. The default value is **on** (checked).

Printer Type


This scrolling list selects the attached printer type. The default value is **none**, indicating that no printer is attached.

Using Terminal Menus


Press the **Menu** key to view the Main Menu, shown below.

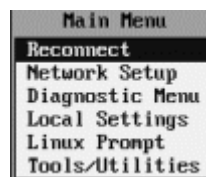

Cursor to the **Network Setup** menu option to change network setting information.

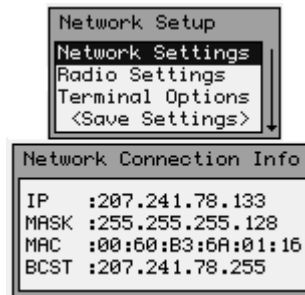


Select **Network Settings** by pressing **Enter**. The following screen appears.

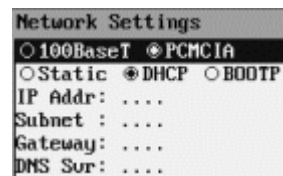


Cursor to the desired option, enter the correct information, and press **Enter**.


Press **Esc** to move backward a screen, and select **Radio Settings**.

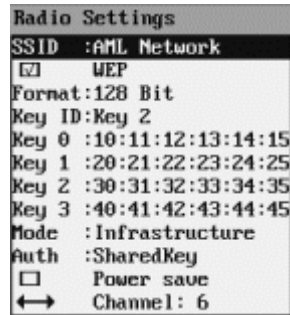


Press **Esc** to move backward a screen. Choose **Terminal Options**.

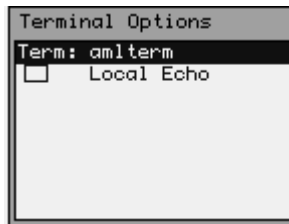


Cursor to **Diagnostic Menu** in the Main Menu to access the following options.

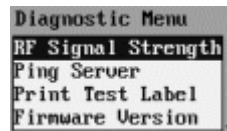


Choosing **RF Signal Strength** shows the screen below.

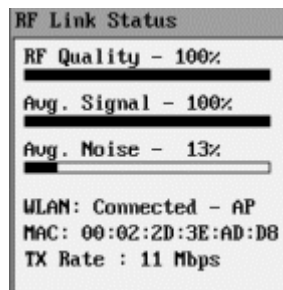


Choose **Ping Server** to check the address to ping.

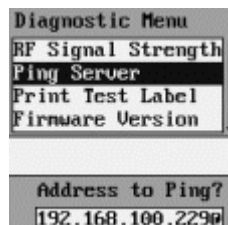


Select **Print Test Label** to select the printer.

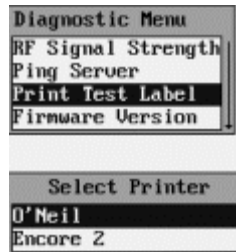


The **Firmware Version** menu option appears as follows.

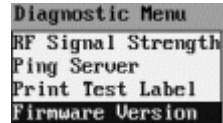

Select **Local Settings** from the Main Menu.

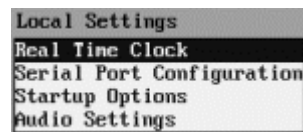


Scroll to **Real Time Clock** to view the clock.

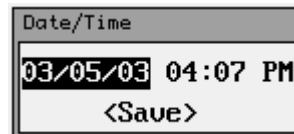

Choose **Linux Prompt** from the Main Menu.



From the Main Menu, cursor to **Tools/Utilities**.

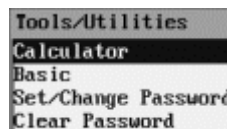

Refer to American Microsystems documentation for explanation of other settings.

Authorizing PowerNet


Each PowerNet Twin Client will run for 30 minutes at a time without authorization. Uninterrupted operation for a production environment is the result of authorizing the software.

Automatic Authorization


The Twin Client Manager can automatically authorize the terminal over the wireless network if the following requirements are met:

- A PC running Twin Client Manager is connected to the wire LAN segment with at least one access point within range of the terminal.
- The **System ID** of the PC on which Twin Client Manager is installed has been used to obtain a site license Authorization code from the Connect web site.

To obtain the System ID of the Twin Client Manager, click on the **Authorization** option in the **Tools** menu, as shown below.

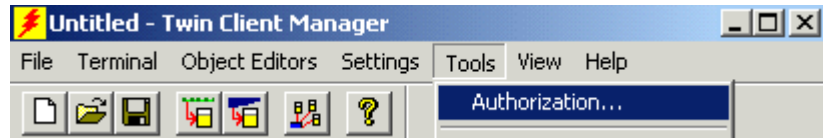

The Authorization window is displayed as shown below.

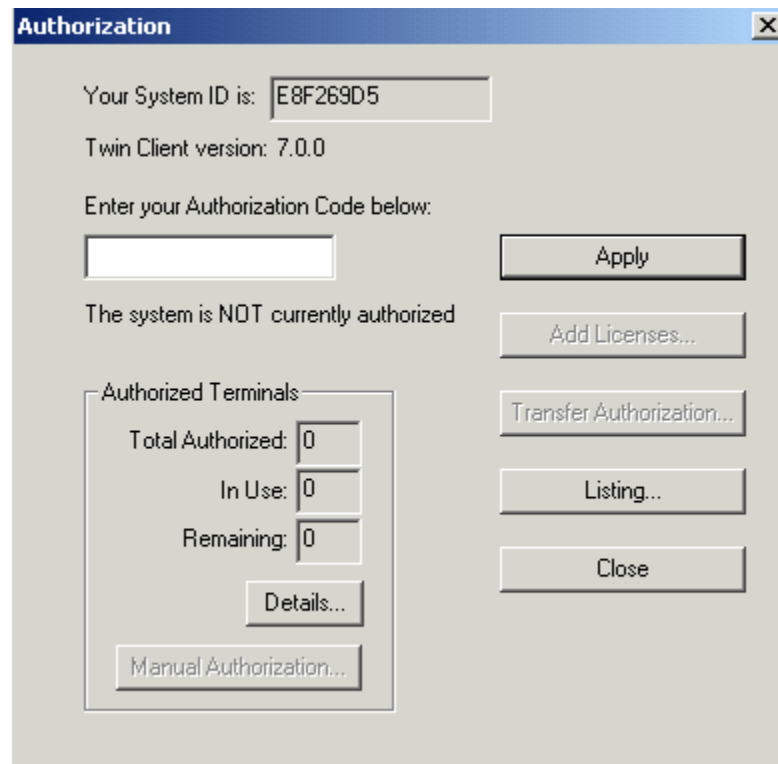


Go to <http://www.connectrf.com>. Click on **Partner Services**. Click on the **Generate Authorization** icon at the top of the page. Follow the directions on the web site.

Authorized Terminals

The number of terminals authorized, the number of terminals in use, and the number of terminals remaining is provided in the Authorized Terminals box on the lower left side of the screen.

Click on the **Details** button to number the options in the screen below in the order of your priority.

Note: The terminal may or may not be able to utilize the Formatter feature depending on its authorization codes.

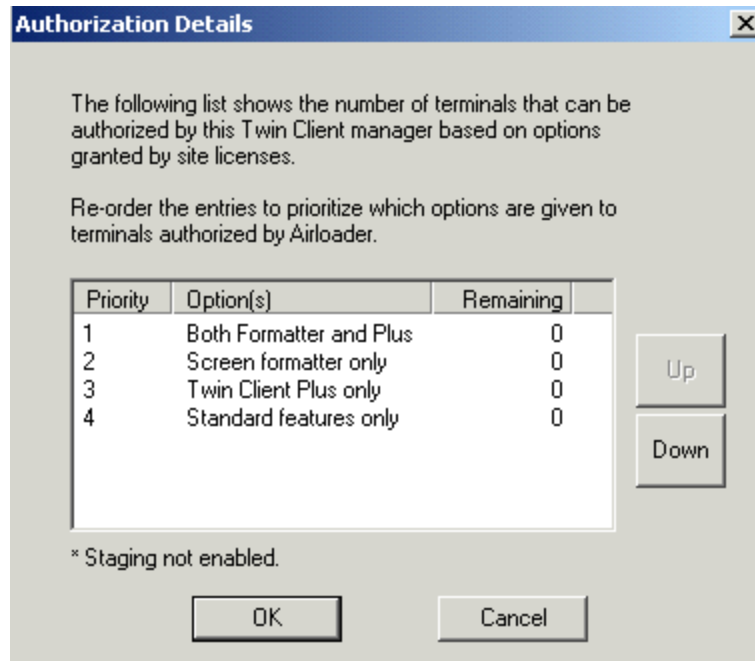

Click on an option and move it using the **Up** and **Down** buttons.

Click on **OK** when finished.


The **Manual Authorization** button is an alternate method of obtaining an authorization code for a terminal. This method does not utilize Airloader, as does the other method.

Click on this button, manually enter your MAC (Media Access Control) address in the appearing screen, and click on **OK**. You now can generate individual authorization codes.


Adding Licenses

The Add Licenses feature is used when adding additional licenses to an already site licensed Twin Client Manager. (i.e. Twin Client Manager is licensed for 10, and the customer purchases another 10 licenses to make a total of 20.)

From Twin Client Manager, choose **Authorization** from under the **Tools** menu. Click on the **Add Licenses** button.

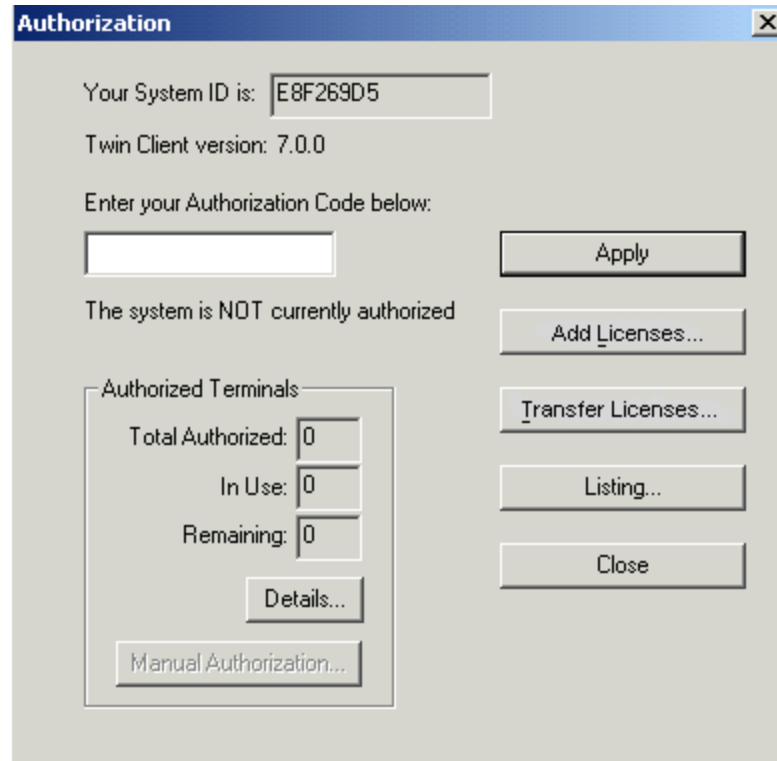

A pop-up box appears with the machine ID and a space for the additional license's authorization code.

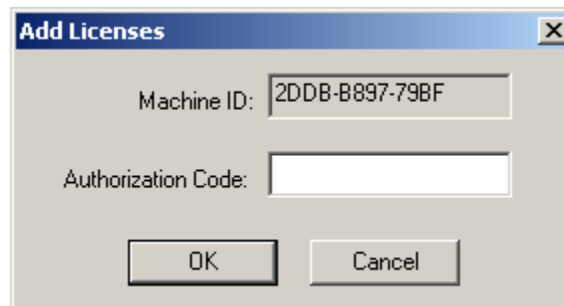

Use the machine ID in the pop-up box instead of the original machine ID to get your authorization code.


If adding users, click on the Add Licenses button before generating the authorization code to get the most current machine ID.

Transferring Licenses

The Transfer Licenses feature is used when moving a site license from one PC to another. After Twin Client Manager is installed on a new PC, you will need the system/machine ID for it.

From Twin Client Manager, select **Authorization** from under the **Tools** menu.

Click on the **Transfer Authorization** button on the old PC. You will be asked for the new system ID. Enter this new system ID. It will generate an authorization code for the new PC's Twin Client Manager.

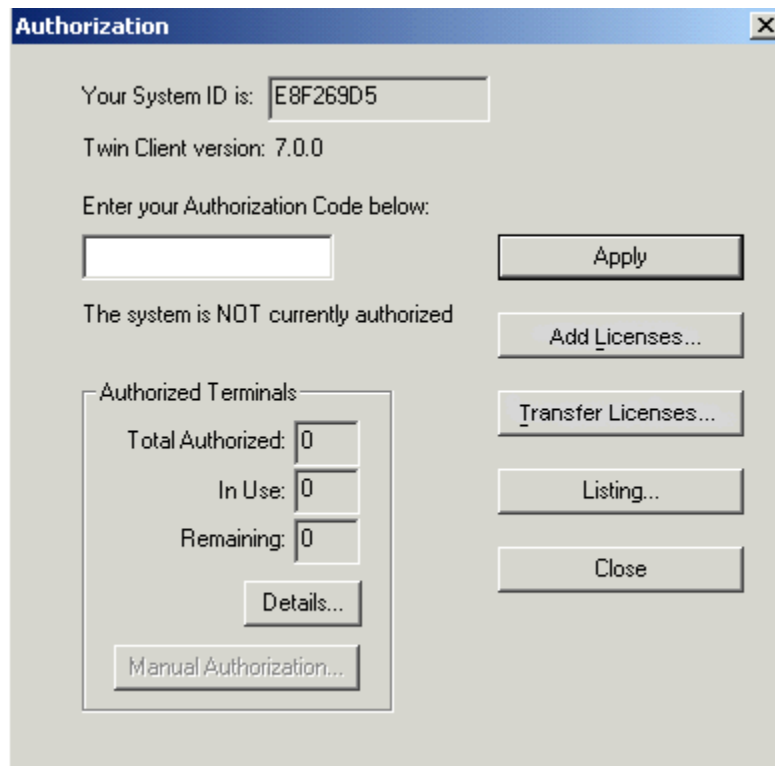

Note: This feature only works if there are licenses remaining on the old PC.

Listing

Click on the **Listing** button to view authorization codes used along with corresponding serial numbers.

The authorization codes used along with their corresponding serial numbers will appear.




Click on **OK** when finished.

Click on the **Close** button when finished.

Software Management

Airloader Auto-Configuration


The Airloader Auto-Configuration form is accessed from the Twin Client Manager **Settings** menu.

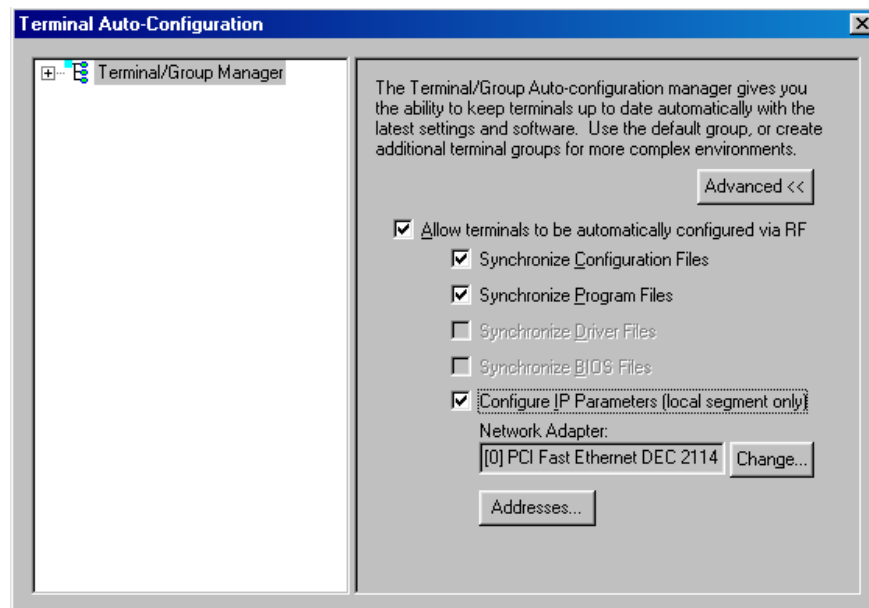

Note: If no options are displayed, click the Advanced<< button.

Enabling Automatic Downloads

Click to put a check in the box that allows terminals to be automatically configured via RF to enable automatic downloading. In the event another PC on the network is already configured and active, the following warning message is displayed.

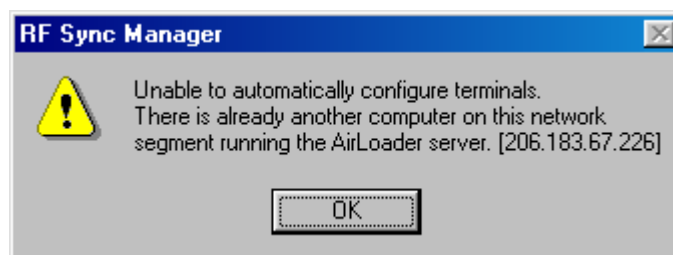

Synchronizing Configuration Files


Click to put a check in the Synchronize Configuration Files box to enable automatic synchronization of configuration files on the terminal. When the terminal is booted, its configuration files will be compared with the most recent on the PC. The terminal is updated automatically if it does not have the latest revision.

Synchronizing Program Files

Click to put a check in the Synchronize Program Files box to enable automatic synchronization of program files on the terminal. When the terminal is booted, its program files will be compared with the most recent on the PC. The terminal is updated automatically if it does not have the latest revision.


Automatic IP Address Assignment

New terminals will be assigned IP addresses automatically if the following box is checked.

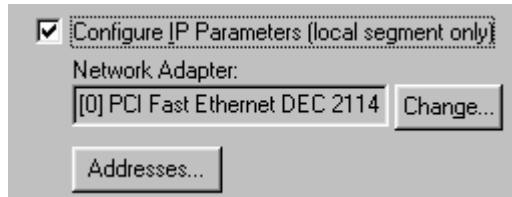

Note: Do not check this option if a DHCP server is configured to manage address assignments.

To set the addresses, click on the **Addresses** button to access the Segment Address Assignments dialog box, as shown in the following figure.

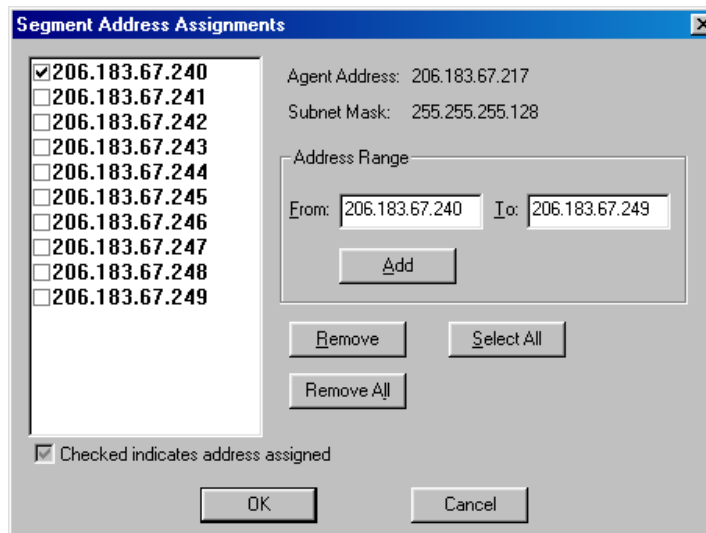


Enter the desired range in the **From** and **To** boxes as shown above, and then click on **Add**.

Creating New Groups


New groups, with different configurations, can be created by clicking on the Terminal Group Manager, and then clicking the right mouse button as shown.



After the new group has been created, the group settings option becomes available for change, as shown below.

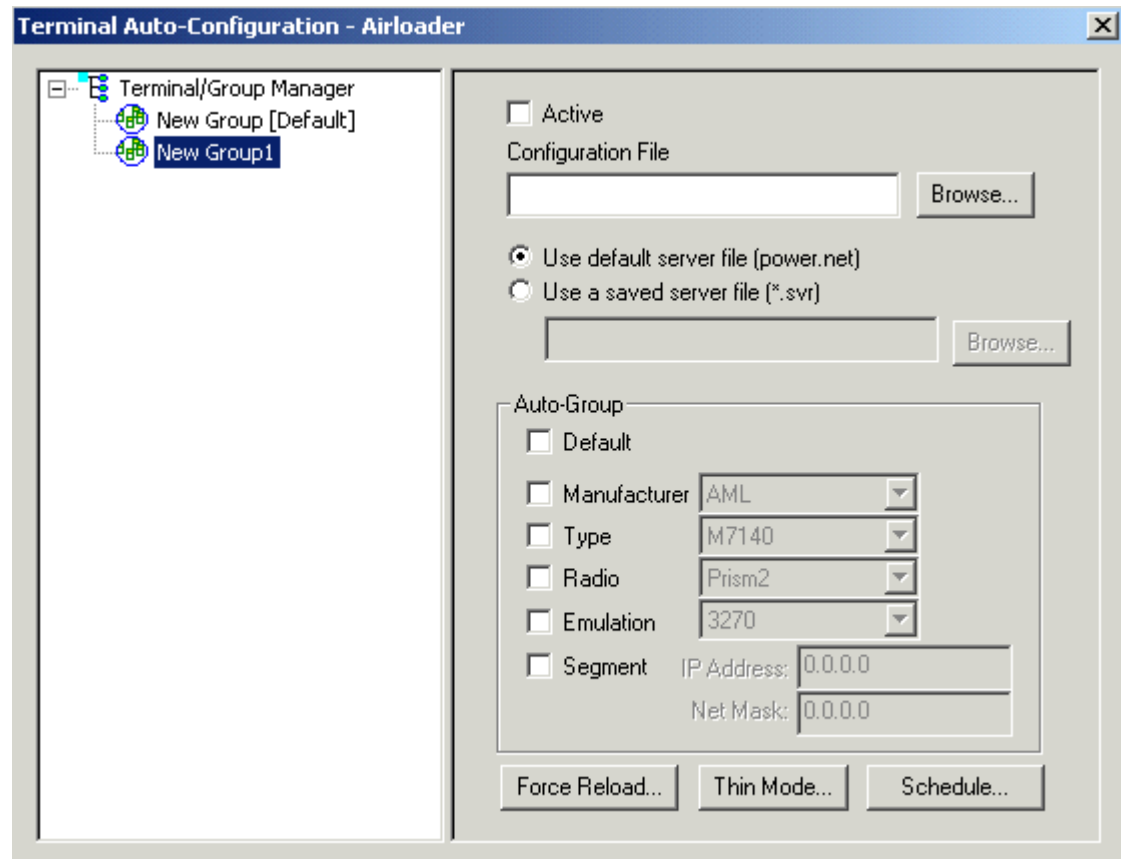

After the Configuration File and all of the other parameters have been set, the group is made active by clicking on the **A**ctive check box.

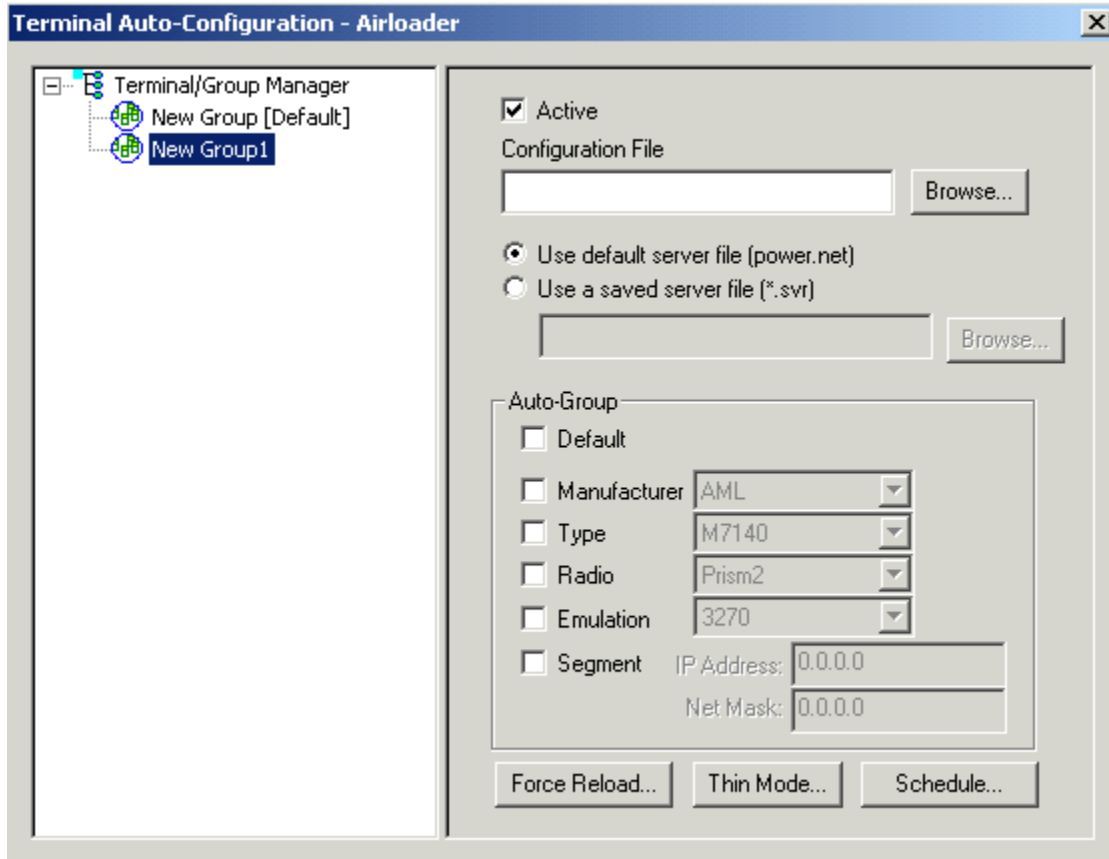


Setting the Segment

Checking the **Segment** button restricts a terminal group to a range of IP addresses. The IP Address can be any valid address on the segment as it is used only to identify the segment. The setting of the Net Mask can be used to restrict the range. This feature is useful for segregating terminal groups by location.

Setting Force Reload


Clicking on the **Force Reload** button forces all terminals within a group to be automatically updated. The following warning message appears.

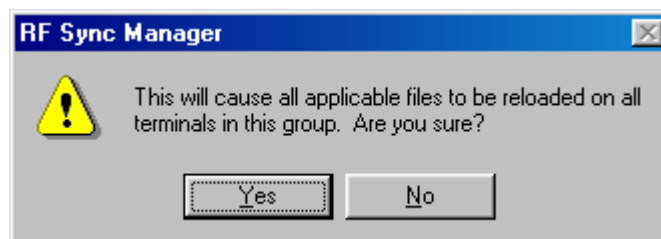

Click on the **Yes** button to force the reload.

Setting the Default Terminal Group


New terminals that have not yet been assigned to any group are initially assigned to the default group in effect when they are booted.

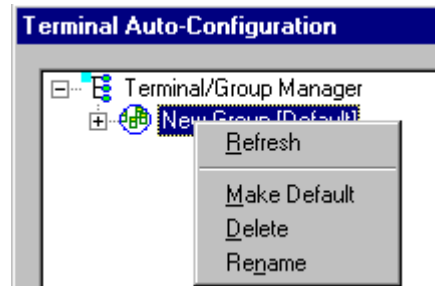


Any group can be made the default group by clicking on the group, and then clicking on the right mouse button. Then click on the **Make Default** option.

Reassigning Terminals


After a terminal has been configured and assigned to the default group, it can be reassigned to a new group by clicking on the terminal icon as shown below.

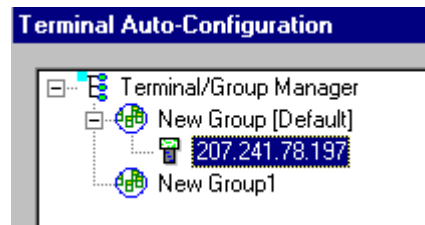

Then, holding the mouse button down, drag the terminal icon to the desired group as shown next.

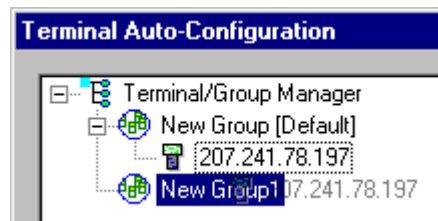

Release the mouse button, which reassigns the terminal.

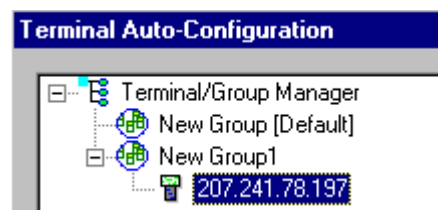


The next time the terminal is rebooted, it will be reconfigured as defined in the group specification.


Mobile Device Manager (MDM) Features

Under **Tools** in Twin Client Manager are the Screen Watcher, Terminal Messenger, and RF Monitor features.


Note: The terminal may or may not be able to utilize the Screen Watcher or Terminal Messenger features depending on its authorization codes.

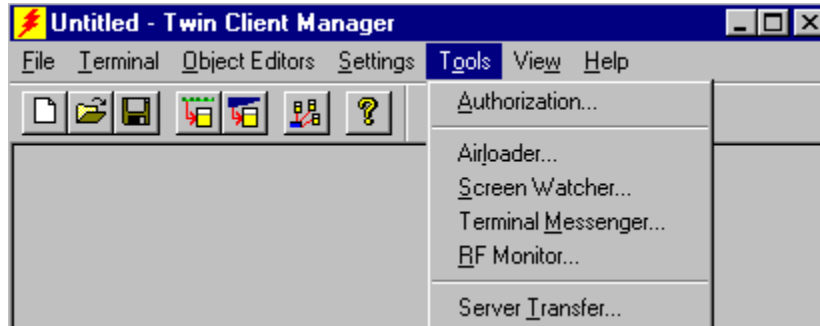


Select **Screen Watcher**, enter the terminal's IP address, and click on **OK**.

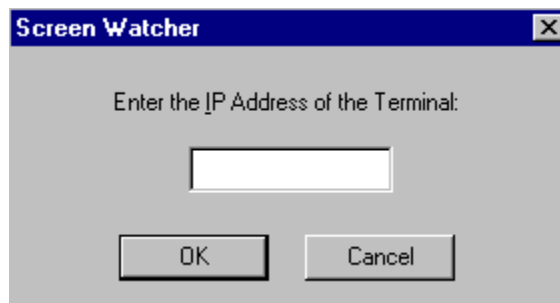

A screen will appear with a display resembling the terminal screen.

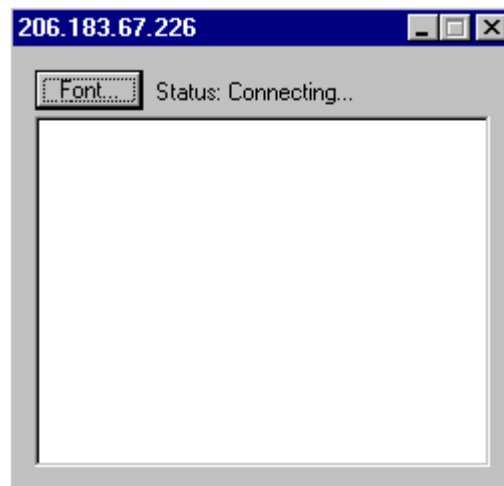

Clicking on the **Font** button on the upper left brings up a screen in which you can modify the font settings, as shown below.

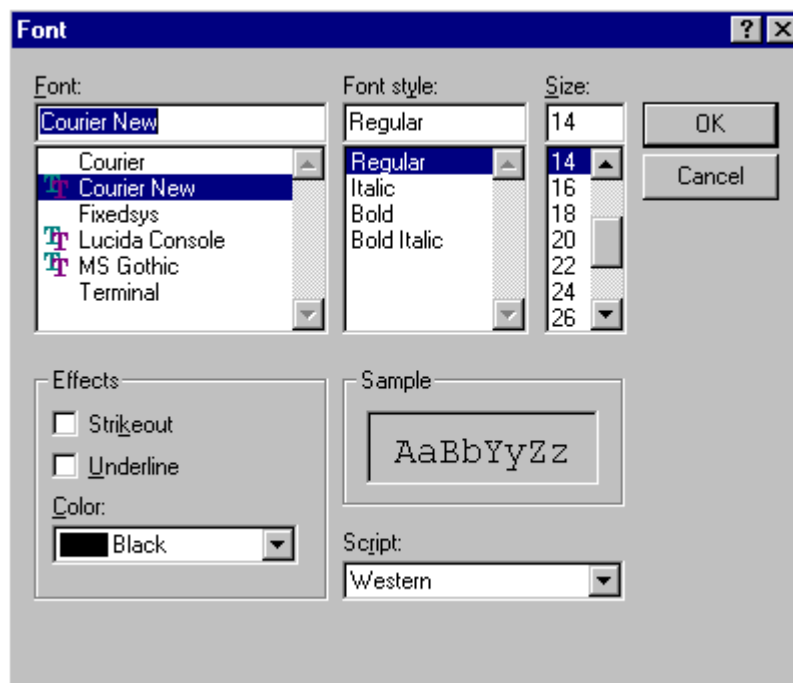


Select **Terminal Messenger** from the **Tools** menu.

You may enter an Address Range in the **From** and **To** boxes on this screen. Click on **Add** when finished.

Enter a message to send in the space provided, select the terminal to receive this message by clicking on it in the **Select Terminal(s)** column, and click on the **Send** button to send the message of your choice to the terminal of your choice.

See the example of the Terminal Messenger screen below.

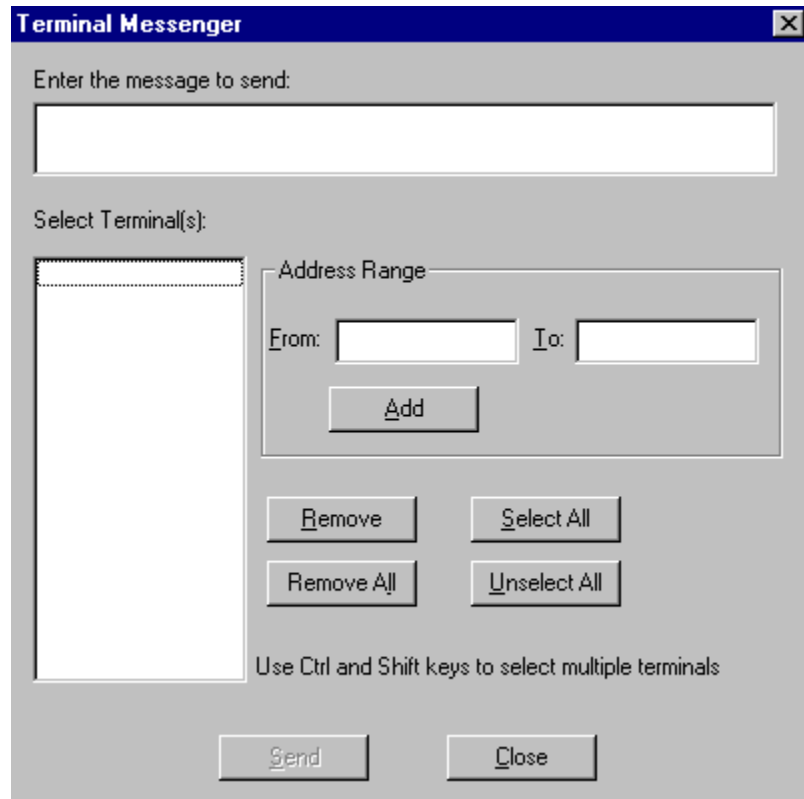


To remove a terminal from the list of terminals receiving your message, click on the terminal number in the **Select Terminal(s)** column, and click on the **Remove** button. Click on the appropriate button, **Remove All**, **Select All**, or **Unselect All**, to remove all terminals, select all terminals, or unselect all terminals from the **Select Terminal(s)** list.

Note: Use the **Ctrl** and **Shift** keys to select multiple terminals.

Click on the **Close** button when finished.


Select **RF Monitor** from the **Tools** menu.

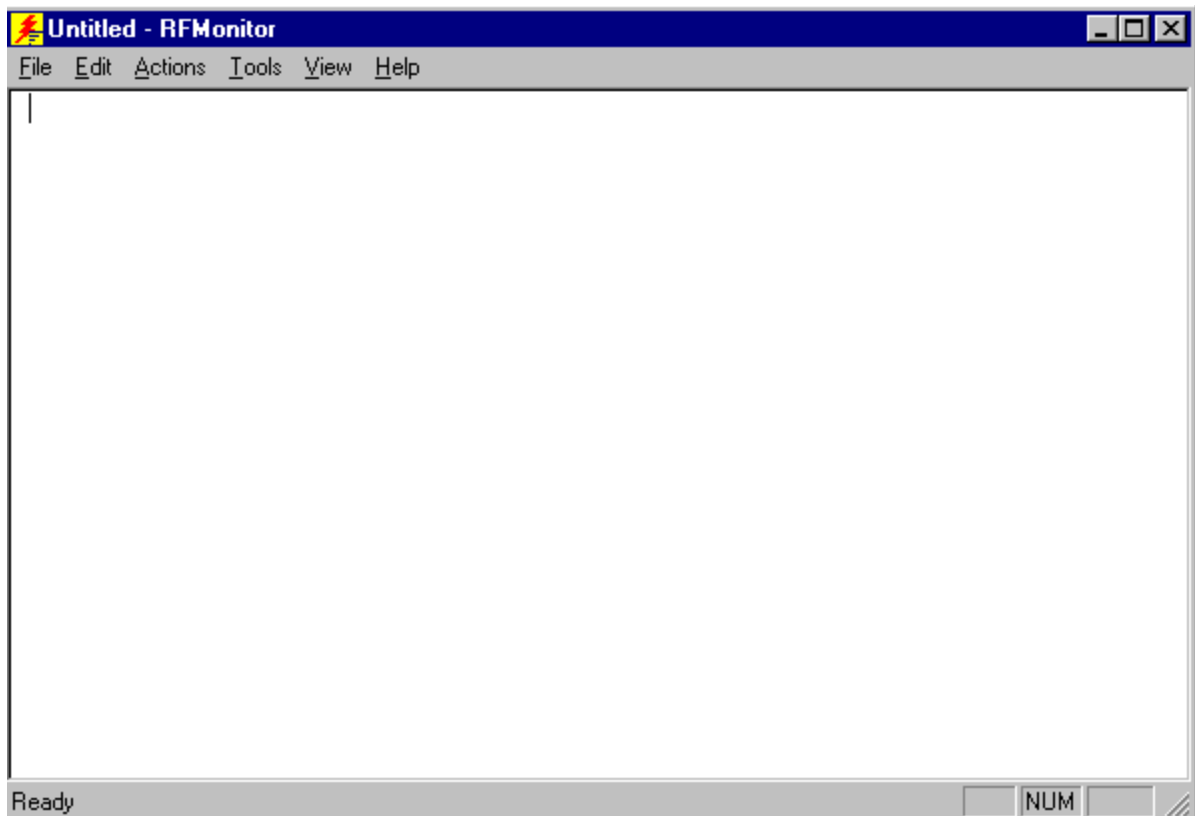


RF Monitor is an "Over The Air" diagnostic tool. It's used to collect diagnostic trace information from RF terminals running PowerNet Twin Client software.

It runs on a Windows PC and will send a command to the RF terminal to start tracing. The terminal, when it receives this command, will start sending the trace information over the RF link to the PC that issued the command. This will be written to a file on this PC that can be sent to us for analysis.


Click on **F**ile to **S**elect Terminal or to **E**xit.

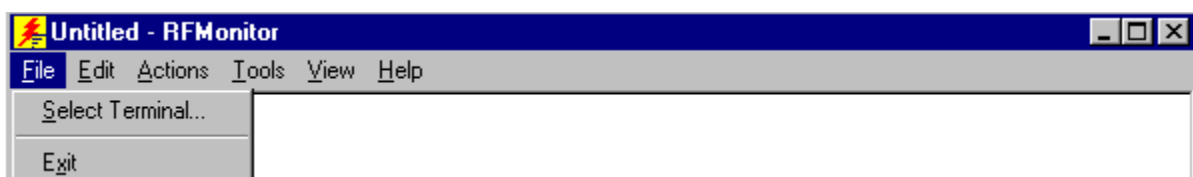


Choosing **S**elect Terminal allows you to view a log of the terminal's activity. Enter the Terminal IP address and Terminal IP Port, and click on **O**K.

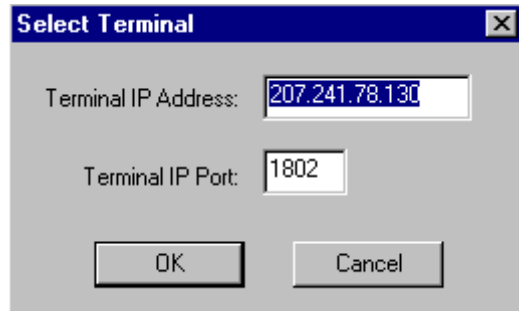


Click on **E**dit. Select Find, and/or Find Next to search for pieces of information in your log, or select Clear to clear the search.

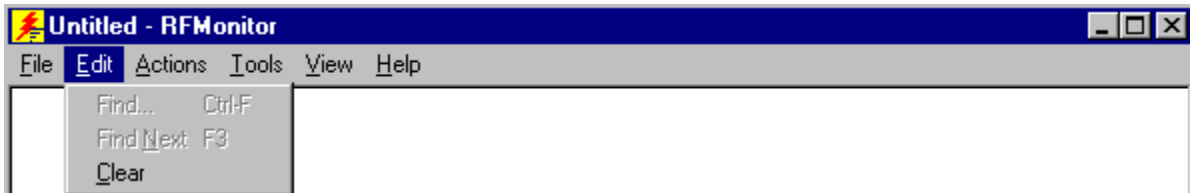


Click on **A**ctions to select Start Monitor or Stop Monitor.

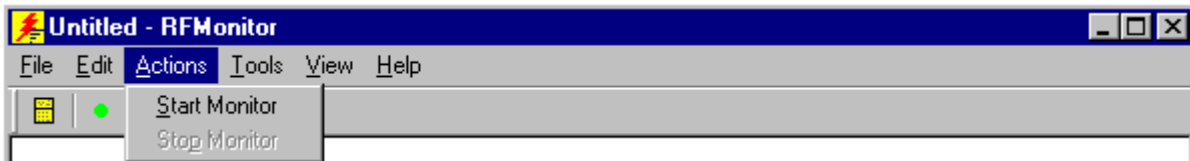


Click on **T**ools to choose Set Debug Levels or Settings.

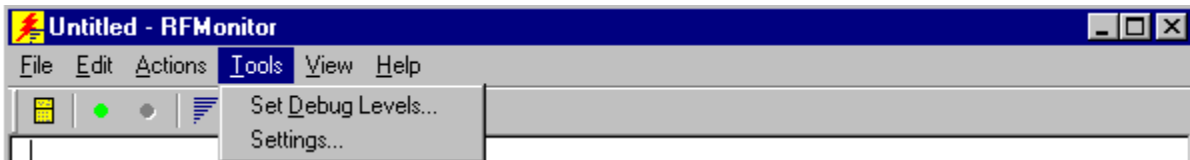


The options in Set Debug Levels are shown below.

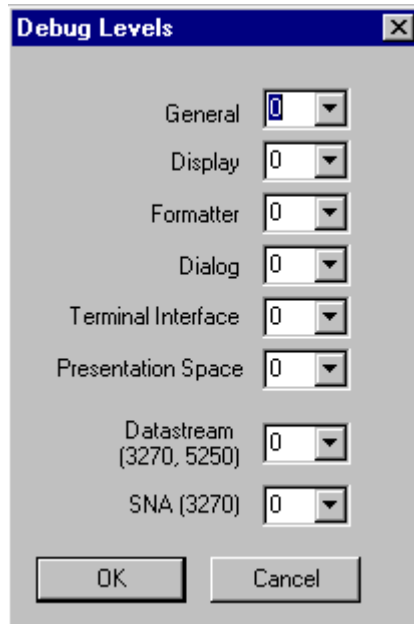

The maximum log file size can be set under Settings.

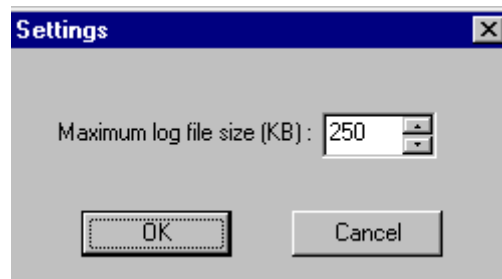

Click on **View** to show or hide the Toolbar and the Status Bar.

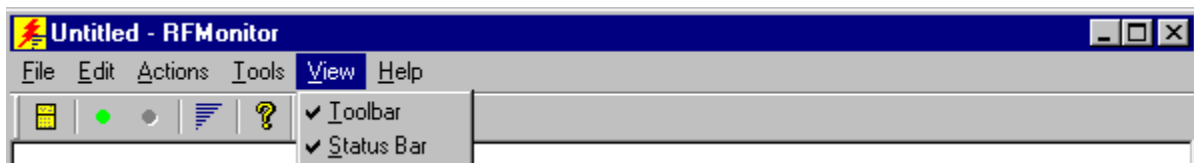


This is the Toolbar. It is found near the top of the screen.



This is the Status Bar. It is found at the bottom of the screen.




Click on **About RF Monitor** under **Help** to view version number information. Click on **About Twin Client Manager** under **Help** in the main menu to view the following screen.

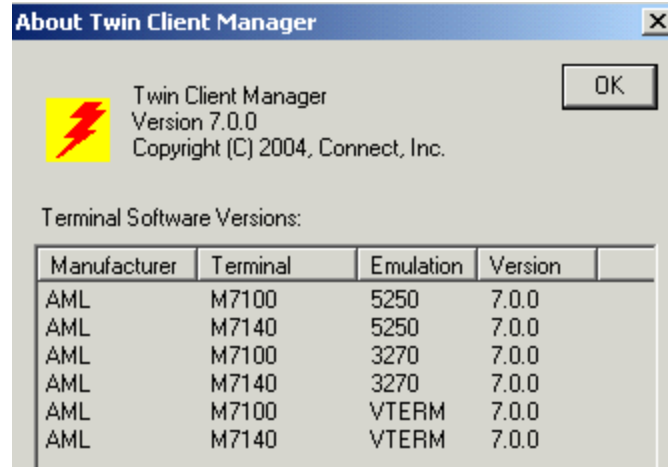


RF Monitor is a very small program and does not even require installation. Just place it in a directory on your PC and create a shortcut to run it. It will run on all versions of Windows except V3.1 and Windows 95.

1. Move RF Monitor to a Windows PC with Network access to the RF terminal.
2. Run RF Monitor. (Create a shortcut or do a **Start/Run**.)
3. From the pull down menu, select **File/Select Terminal**.
4. Key in the RF terminal IP address and leave the port at 1802.

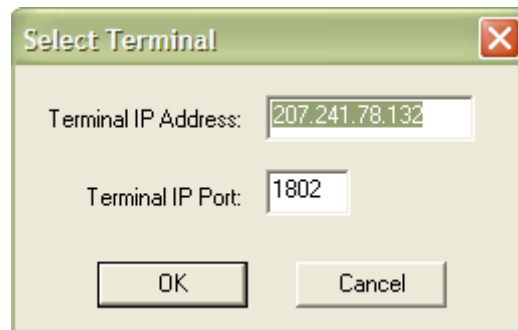

5. From the pull down menu, select **Tools/Set Debug Levels**. Set all levels to 9 except Datastream and SNA.

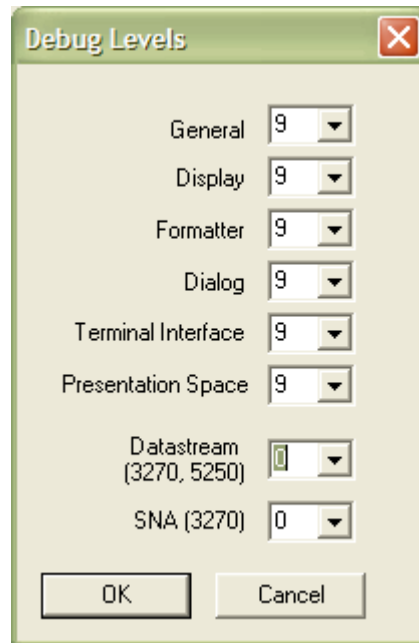

6. With the RF terminal sitting at the **Press Any Key** prompt, select **Actions/Start Monitor**.
7. Press a key on the RF terminal to open a session, and you should see trace data in the RF Monitor window. When done, end the trace and the file will be named **tnxxx.yyy.log** (where **xxx.yyy** is the last 2 octets of the RF terminal's IP address) in the directory in which RF Monitor was running.

```

08/11 11:57:55.000      0ms Log Started.
08/11 11:57:55.000      50ms BEGIN 5250 6.5.0 IBM-5291-1 TN  E:\tnvt.cf
08/11 11:57:55.000     280ms TN_key=078.132< 0 vars (0)
08/11 11:57:55.000      50ms Dialog File: ''
08/11 11:57:55.000      0ms Dialog ''
08/11 11:57:57.000     1760ms Connected To: 207.241.78.5
08/11 11:57:57.000      60ms tip_snd: 2 bytes
51 00                                     Q.
08/11 11:57:57.000      50ms tip_rcv: 14 bytes
51 36 38 30 30 34 36 36 2E 33 2E 36 10 15      Q6800466.3.6..
08/11 11:57:57.000      60ms tip_setup: model 6800 key 46 rev 630
08/11 11:57:57.000     160ms tip_snd: 137 bytes
5A 02 35 31 5A 02 41 31 5A 05 42 31 30 38 30 5A      Z.512.A12.B10802
02 44 30 5A 05 46 33 32 34 30 5A 02 47 30 5A 02      .D02.F32402.G02.
49 04 5A 02 40 31 5A 02 4E 30 5A 09 50 34 2C 33      I.Z.M12.N02.P4,3
32 2C 31 38 30 5A 02 51 31 5A 02 52 30 59 02 42      2,1802.Q12.R0Y.B
01 59 02 43 00 59 02 45 01 59 02 46 00 59 02 4A      .Y.C.Y.E.Y.F.Y.J
00 59 02 49 01 58 03 42 00 00 58 02 46 0A 58 02      .Y.I.X.B..X.F.X.
47 00 58 08 48 65 6E 67 6C 69 73 68 5A 02 56 0A      G.X.HenglishZ.V.
5A 11 48 31 2C 31 35 30 2C 32 30 34 38 2C 33 30      Z.H1,150,2048,30

```

Common Problems with RF Monitor

- **The trace won't start.**

RF Monitor uses UDP to send commands to the RF device. On busy networks UDP packets are not always delivered. The terminal can miss the command to start the trace. Below are some things that can be useful.

- a. Ping the RF terminal from the same PC before starting RF Monitor. (This seems to "open" a path to the terminal.)
- b. Start the monitor with the terminal at the **Press Any Key** prompt. (While the terminal is at this prompt, it is not doing much and has a better chance of hearing the start trace command.)

- **I don't understand what this trace means.**

The trace that this tool collects is engineering level information. It allows an end user to collect information that can be analyzed by Connect engineering.

It will generally be requested by Connect support to help diagnose a reported problem.

To be able to read and understand these completely, you need to have an understanding of:

- a. Emulation protocols (IBM 5250, IBM 3270, DEC VT200, etc.)
- b. PowerNet Twin Client products
- c. RF Network concepts
- d. Wired network concepts
- e. Telnet sessions
- f. TCP/IP

They are text files that can be read with any editor or viewer and can be useful to end users and integrators even if they may not have all the requirements above.


- **I have an intermittent problem and it could happen on any one of my 100 terminals. RF Monitor only does one terminal at a time. What can I do?**

RF Monitor is not the right diagnostic tool for this type of problem. PowerNet products have another diagnostic tool that can be used called the "Diagnostic Server".

This tool can be set up to run trace diagnostics on up to 300 terminals at the same time. This tool will be provided as needed for systems under PowerNet support agreement OR by T&M when they are not covered.

It also includes the service of a PowerNet support engineer.

Server Transfer is another feature. From the **Tools** menu, select **Server Transfer**.

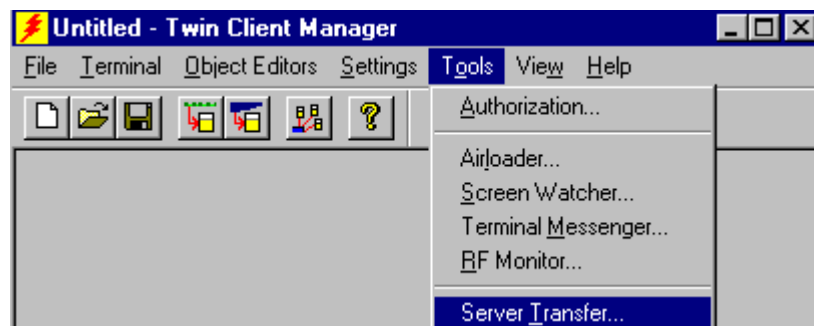

The FTP Settings screen appears.



To send object editor and configuration files from Windows to your Linux box, enter your server address, and click on **OK**.


Downloading Files

1. Make sure the terminal is powered **On**.


Note: If a client has just been loaded onto the terminal, the following screen appears.

```
TwinClient TNVT
(c)1991-2006 Connect
Keypress To Continue
```


2. Press **Shift + c** to access the menu below.

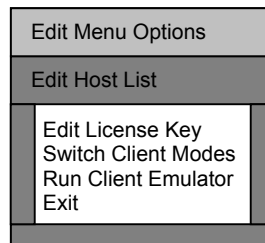


3. If the host IP address(es) were not pre-configured as described in the Setting the Servers section of *Configuring the Manager*, or if you wish to change those settings using the terminal menus, select the **Edit Host List** option and enter Host IP address(es) as required. Press <F3> to save and <F7> to quit.

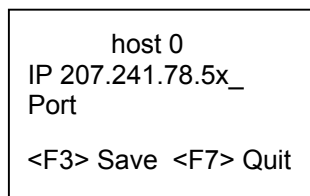


4. On the PC, click on **T**erminal and **S**end **P**rogram to Terminal.

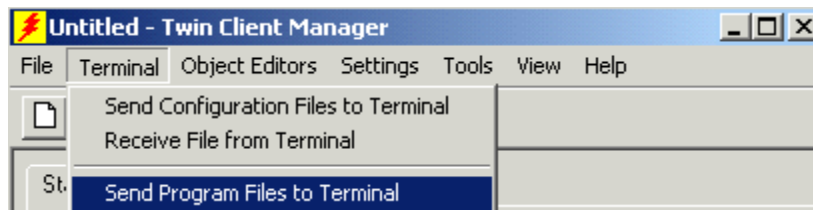

5. Click on **Y**es or **N**o.

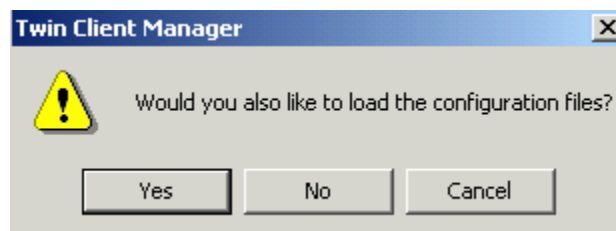

6. Enter the desired information.

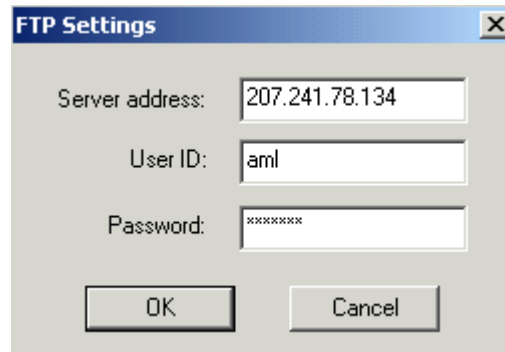

The image shows a standard Windows-style dialog box titled "FTP Settings". It has a blue title bar with a close button (X) on the right. The dialog contains three text input fields. The first is labeled "Server address:" and contains the IP address "207.241.78.134". The second is labeled "User ID:" and contains the text "aml". The third is labeled "Password:" and contains a series of seven asterisks "xxxxxxx". At the bottom of the dialog are two buttons: "OK" on the left and "Cancel" on the right.

7. Choose **OK**.
8. Power the terminal **Off** and then **On**.

The terminal is now ready to begin a Telnet session with the new files.

Note: If there are errors loading the AML terminal from Twin Client Manager, enable the FTP and the Telnet servers (from the AML system menu under local settings) before loading the files. The password is turk182 unless the user has changed it.


This page is intentionally blank.

Chapter 3 • Keypad Configuration


Diagrams

The keypad diagrams for the M7140 begin on the following page.


vt emulation

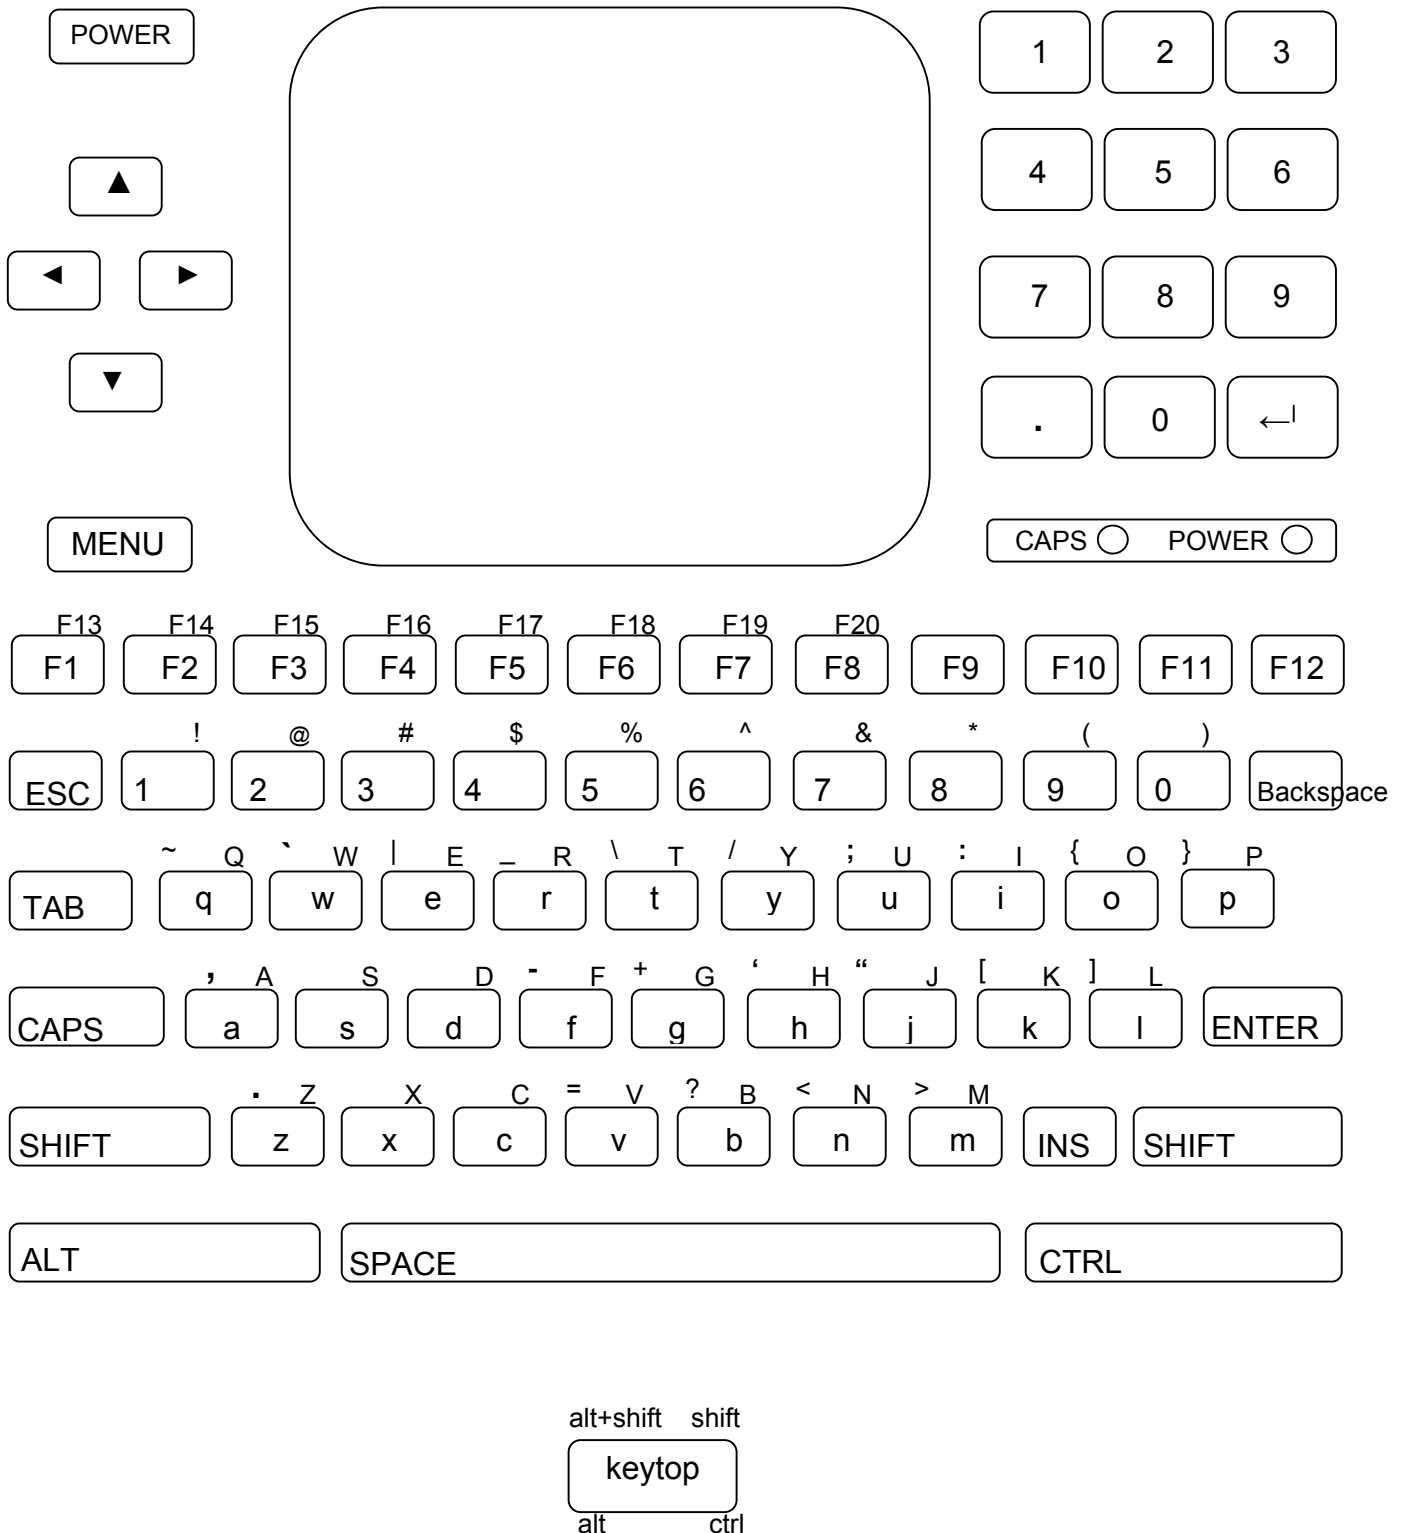

3270

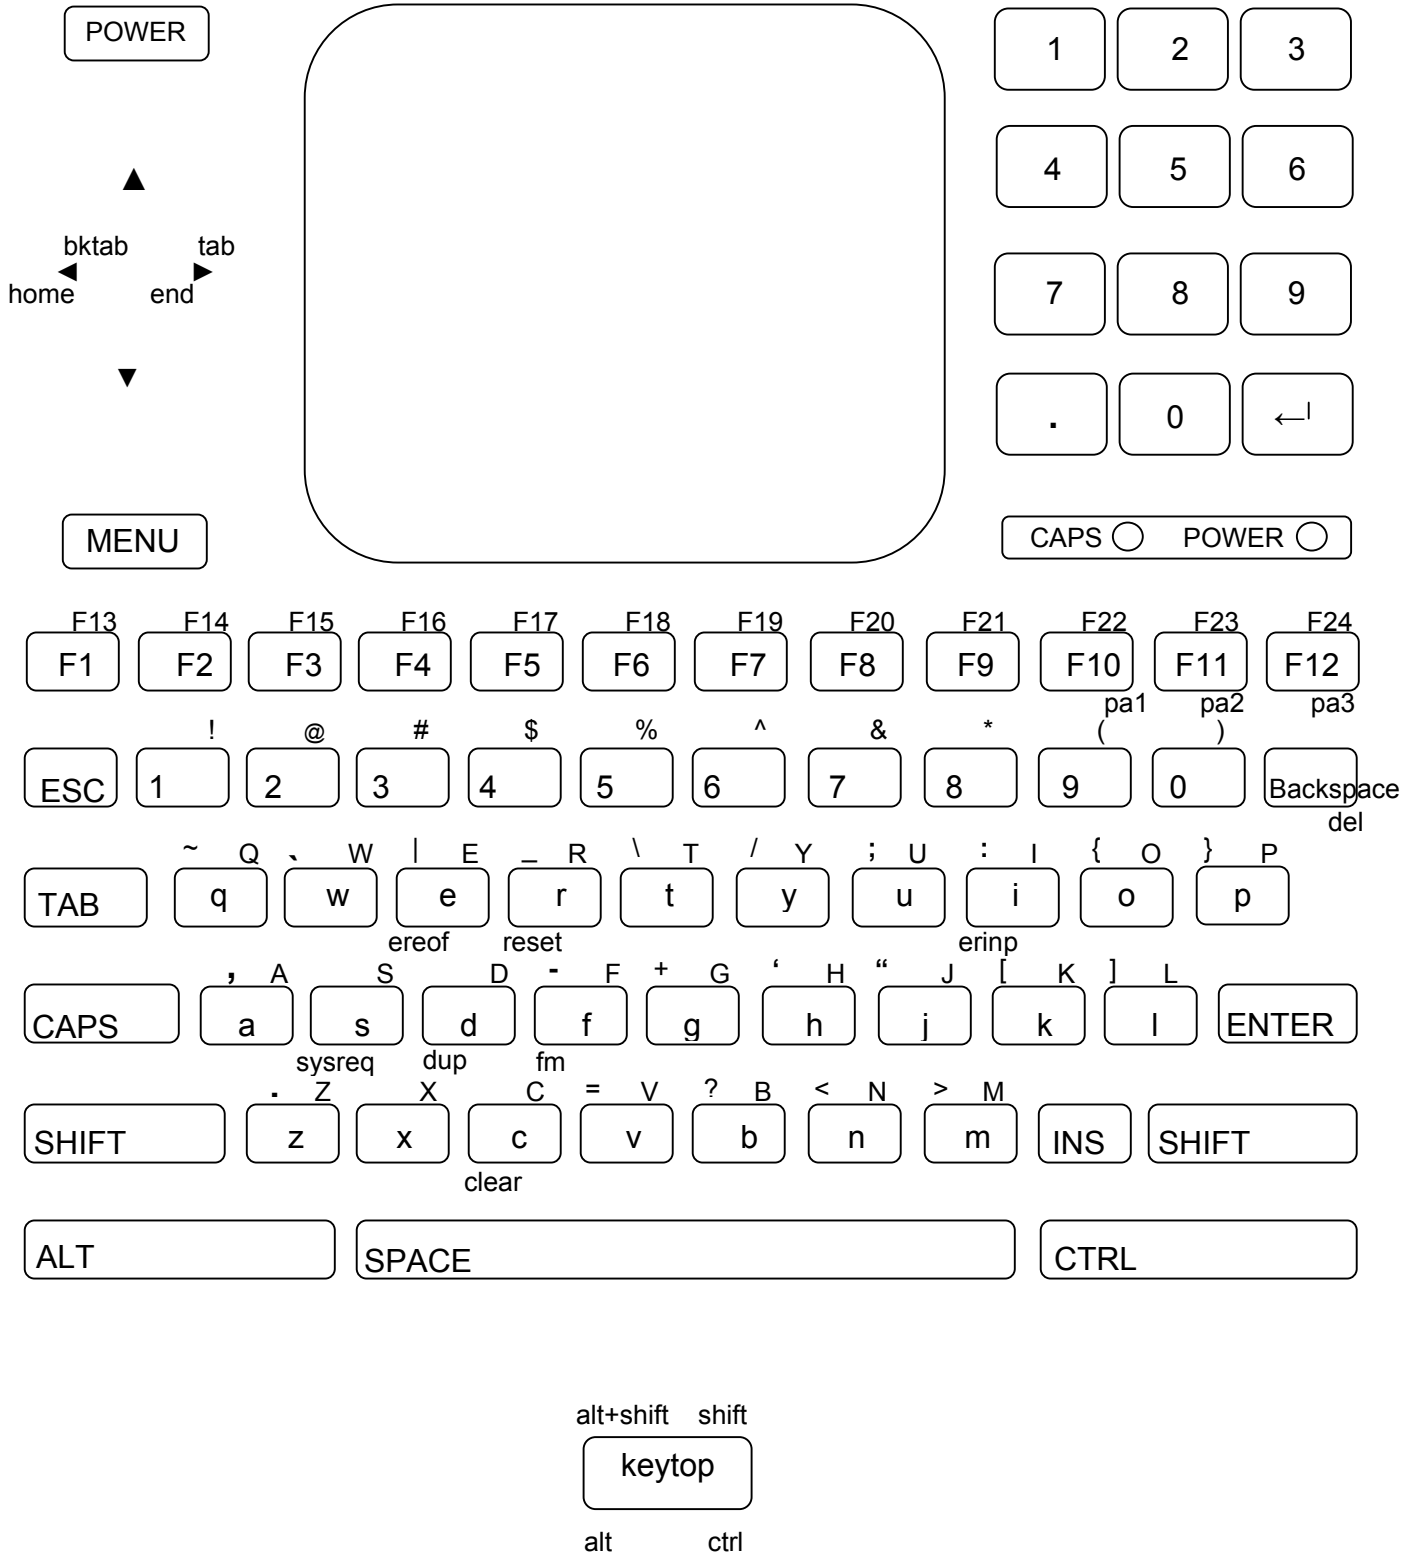

5250

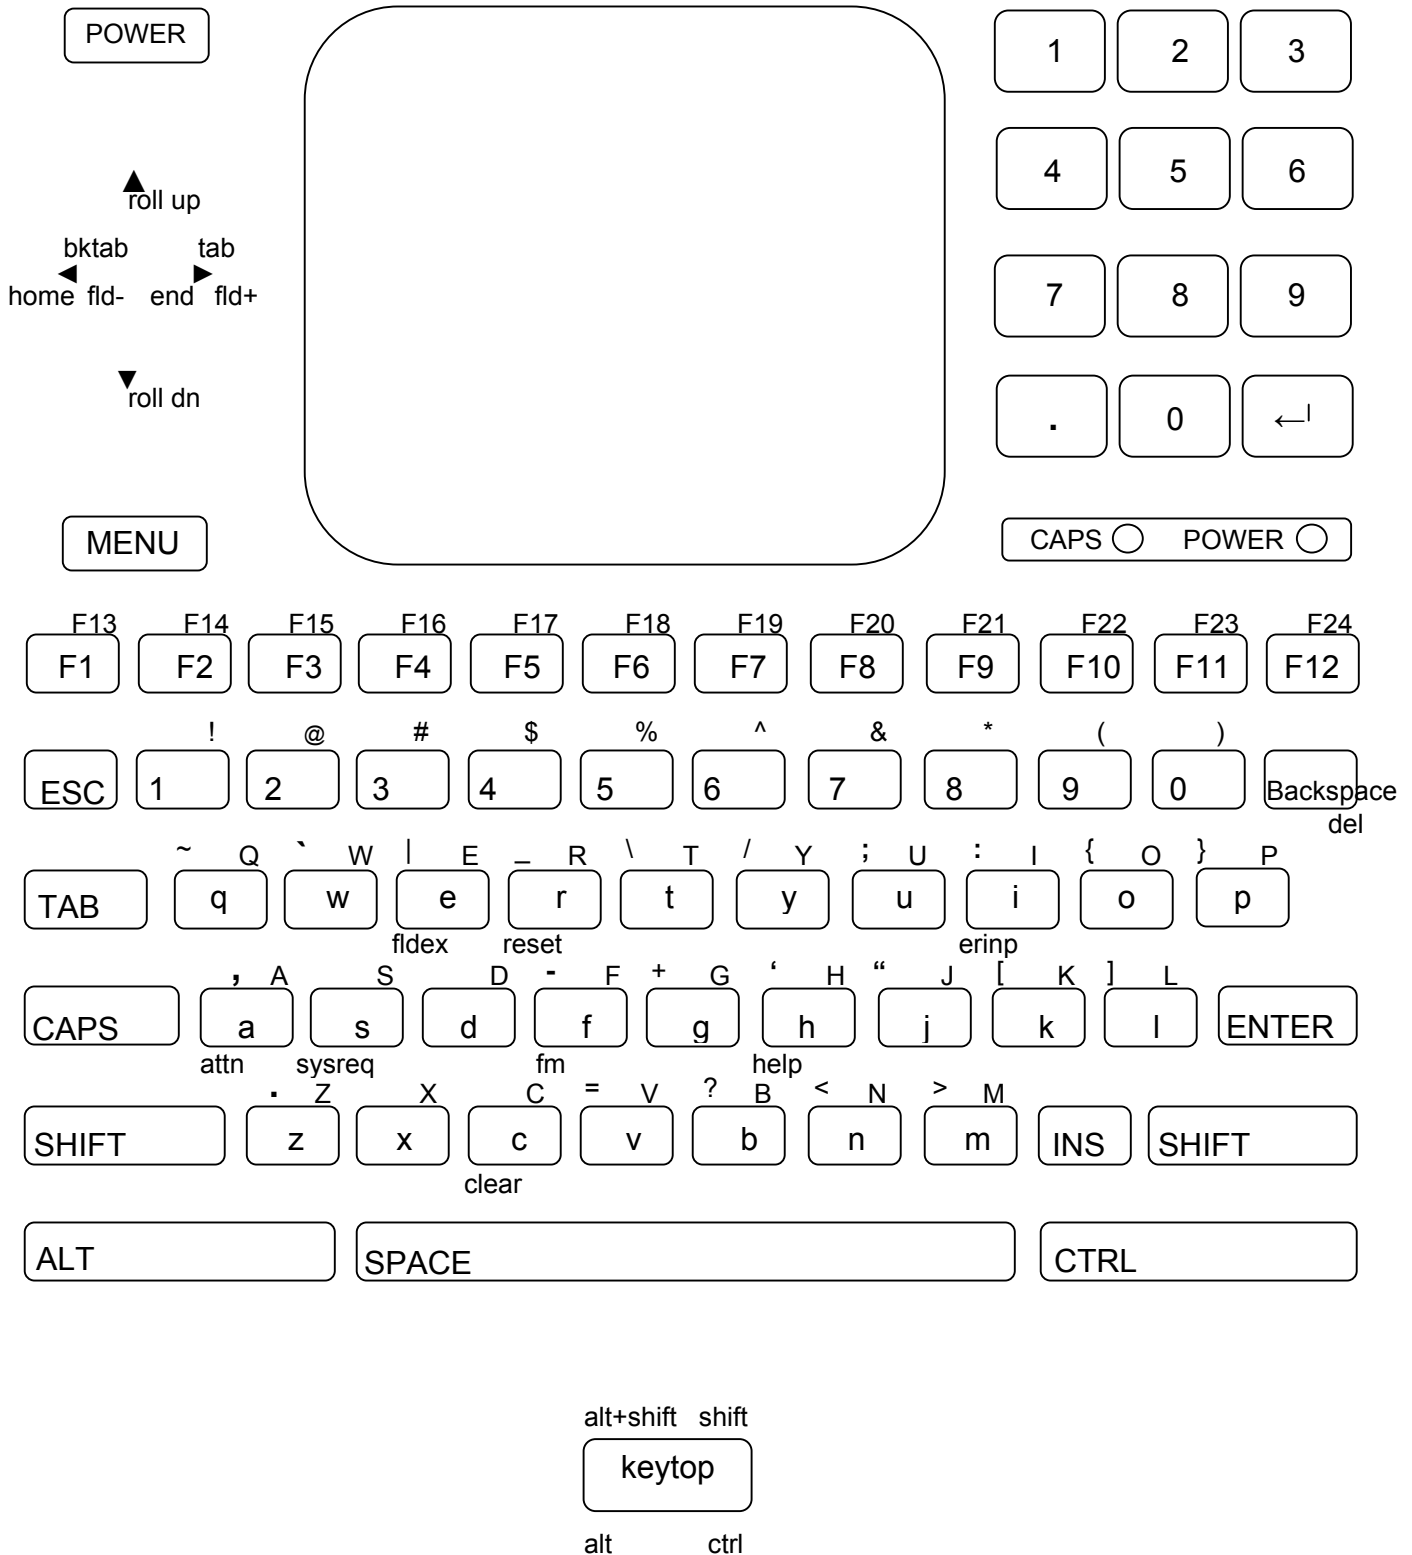

Table

Key	VT	3270	5250
a	<a>	<a>	<a>
b			
c	<c>	<c>	<c>
d	<d>	<d>	<d>
e	<e>	<e>	<e>
f	<f>	<f>	<f>
g	<g>	<g>	<g>
h	<h>	<h>	<h>
i	<i>	<i>	<i>
j	<j>	<j>	<j>
k	<k>	<k>	<k>
l	<l>	<l>	<l>
m	<m>	<m>	<m>
n	<n>	<n>	<n>
o	<o>	<o>	<o>
p	<p>	<p>	<p>
q	<q>	<q>	<q>
r	<r>	<r>	<r>
s	<s>	<s>	<s>
t	<t>	<t>	<t>
u	<u>	<u>	<u>
v	<v>	<v>	<v>
w	<w>	<w>	<w>
x	<x>	<x>	<x>
y	<y>	<y>	<y>
z	<z>	<z>	<z>
A	<Shift><a>	<Shift><a>	<Shift><a>
B	<Shift>	<Shift>	<Shift>
C	<Shift><c>	<Shift><c>	<Shift><c>
D	<Shift><d>	<Shift><d>	<Shift><d>
E	<Shift><e>	<Shift><e>	<Shift><e>
F	<Shift><f>	<Shift><f>	<Shift><f>
G	<Shift><g>	<Shift><g>	<Shift><g>
H	<Shift><h>	<Shift><h>	<Shift><h>
I	<Shift><i>	<Shift><i>	<Shift><i>
J	<Shift><j>	<Shift><j>	<Shift><j>
K	<Shift><k>	<Shift><k>	<Shift><k>
L	<Shift><l>	<Shift><l>	<Shift><l>
M	<Shift><m>	<Shift><m>	<Shift><m>
N	<Shift><n>	<Shift><n>	<Shift><n>
O	<Shift><o>	<Shift><o>	<Shift><o>
P	<Shift><p>	<Shift><p>	<Shift><p>
Q	<Shift><q>	<Shift><q>	<Shift><q>
R	<Shift><r>	<Shift><r>	<Shift><r>
S	<Shift><s>	<Shift><s>	<Shift><s>
T	<Shift><t>	<Shift><t>	<Shift><t>
U	<Shift><u>	<Shift><u>	<Shift><u>
V	<Shift><v>	<Shift><v>	<Shift><v>
W	<Shift><w>	<Shift><w>	<Shift><w>
X	<Shift><x>	<Shift><x>	<Shift><x>
Y	<Shift><y>	<Shift><y>	<Shift><y>
Z	<Shift><z>	<Shift><z>	<Shift><z>
1	<1>	<1>	<1>
2	<2>	<2>	<2>
3	<3>	<3>	<3>
4	<4>	<4>	<4>
5	<5>	<5>	<5>
6	<6>	<6>	<6>
7	<7>	<7>	<7>
8	<8>	<8>	<8>
9	<9>	<9>	<9>

0	<0>	<0>	<0>
! exclamation	<Shift><1>	<Shift><1>	<Shift><1>
@ at sign	<Shift><2>	<Shift><2>	<Shift><2>
# pound	<Shift><3>	<Shift><3>	<Shift><3>
\$ dollar	<Shift><4>	<Shift><4>	<Shift><4>
% percent	<Shift><5>	<Shift><5>	<Shift><5>
^ carat	<Shift><6>	<Shift><6>	<Shift><6>
& ampersand	<Shift><7>	<Shift><7>	<Shift><7>
* asterisk	<Shift><8>	<Shift><8>	<Shift><8>
(left parenthesis	<Shift><9>	<Shift><9>	<Shift><9>
) right parenthesis	<Shift><0>	<Shift><0>	<Shift><0>
F1	<F1>	<F1>	<F1>
F2	<F2>	<F2>	<F2>
F3	<F3>	<F3>	<F3>
F4	<F4>	<F4>	<F4>
F5	<F5>	<F5>	<F5>
F6	<F6>	<F6>	<F6>
F7	<F7>	<F7>	<F7>
F8	<F8>	<F8>	<F8>
F9	<F9>	<F9>	<F9>
F10	<F10>	<F10>	<F10>
F11	<F11>	<F11>	<F11>
F12	<F12>	<F12>	<F12>
F13	<Shift><F1>	<Shift><F1>	<Shift><F1>
F14	<Shift><F2>	<Shift><F2>	<Shift><F2>
F15	<Shift><F3>	<Shift><F3>	<Shift><F3>
F16	<Shift><F4>	<Shift><F4>	<Shift><F4>
F17	<Shift><F5>	<Shift><F5>	<Shift><F5>
F18	<Shift><F6>	<Shift><F6>	<Shift><F6>
F19	<Shift><F7>	<Shift><F7>	<Shift><F7>
F20	<Shift><F8>	<Shift><F8>	<Shift><F8>
F21	---	<Shift><F9>	<Shift><F9>
F22	---	<Shift><F10>	<Shift><F10>
F23	---	<Shift><F11>	<Shift><F11>
F24	---	<Shift><F12>	<Shift><F12>
▲	<▲>	<▲>	<▲>
▼	<▼>	<▼>	<▼>
◀	<◀>	<◀>	<◀>
▶	<▶>	<▶>	<▶>
Alt	<Alt>	<Alt>	<Alt>
Backspace	<Backspace>	<Backspace>	<Backspace>
Caps	<Caps>	<Caps>	<Caps>
Ctrl	<Ctrl>	<Ctrl>	<Ctrl>
Enter	<Enter>	<Enter>	<Enter>
Esc	<Esc>	<Esc>	<Esc>
Ins	<Ins>	<Ins>	<Ins>
Menu	<Menu>	<Menu>	<Menu>
Power	<Power>	<Power>	<Power>
Shift	<Shift>	<Shift>	<Shift>
Space	<Space>	<Space>	<Space>
Tab	<Tab>	<Tab>	<Tab>
~ tilde	<Alt><Shift><q>	<Alt><Shift><q>	<Alt><Shift><q>
` grave accent	<Alt><Shift><w>	<Alt><Shift><w>	<Alt><Shift><w>
vertical bar	<Alt><Shift><e>	<Alt><Shift><e>	<Alt><Shift><e>
_ underscore	<Alt><Shift><r>	<Alt><Shift><r>	<Alt><Shift><r>
\ backslash	<Alt><Shift><t>	<Alt><Shift><t>	<Alt><Shift><t>
/ forward slash	<Alt><Shift><y>	<Alt><Shift><y>	<Alt><Shift><y>
; semicolon	<Alt><Shift><u>	<Alt><Shift><u>	<Alt><Shift><u>
: colon	<Alt><Shift><i>	<Alt><Shift><i>	<Alt><Shift><i>
{ left brace	<Alt><Shift><o>	<Alt><Shift><o>	<Alt><Shift><o>
} right brace	<Alt><Shift><p>	<Alt><Shift><p>	<Alt><Shift><p>
. period	<Alt><Shift><z>	<Alt><Shift><z>	<Alt><Shift><z>
. period	<.>	<.>	<.>
, comma	<Alt><Shift><a>	<Alt><Shift><a>	<Alt><Shift><a>
- hyphen	<Alt><Shift><f>	<Alt><Shift><f>	<Alt><Shift><f>

+ addition sign	<Alt><Shift><g>	<Alt><Shift><g>	<Alt><Shift><g>
' apostrophe	<Alt><Shift><h>	<Alt><Shift><h>	<Alt><Shift><h>
" quote	<Alt><Shift><j>	<Alt><Shift><j>	<Alt><Shift><j>
[left bracket	<Alt><Shift><k>	<Alt><Shift><k>	<Alt><Shift><k>
] right bracket	<Alt><Shift><l>	<Alt><Shift><l>	<Alt><Shift><l>
= equal sign	<Alt><Shift><v>	<Alt><Shift><v>	<Alt><Shift><v>
? question mark	<Alt><Shift>	<Alt><Shift>	<Alt><Shift>
< less than	<Alt><Shift><n>	<Alt><Shift><n>	<Alt><Shift><n>
> greater than	<Alt><Shift><m>	<Alt><Shift><m>	<Alt><Shift><m>
Attn	---	---	<Alt><a>
Backtab	---	<Shift><◀>	<Shift><◀>
Clear	---	<Alt><c>	<Alt><c>
Del	---	<Ctrl><Backspace>	<Ctrl><Backspace>
Dup	---	<Alt><d>	---
End	---	<Alt><▶>	<Alt><▶>
Erase eof	---	<Alt><e>	<Alt><e>
Erase inp	---	<Alt><i>	<Alt><i>
Field exit	---	---	<Alt><e>
Field -	---	---	<Ctrl><◀>
Field +	---	---	<Ctrl><▶>
Fm	---	<Alt><f>	<Alt><f>
Help	---	---	<Alt><h>
Home	---	<Alt><◀>	<Alt><◀>
Pa1	---	<Ctrl><F10>	---
Pa2	---	<Ctrl><F11>	---
Pa3	---	<Ctrl><F12>	---
Reset	---	<Alt><r>	<Alt><r>
Roll up	---	---	<Ctrl><▲>
Roll down	---	---	<Ctrl><▼>
Sysreq	---	<Alt><s>	<Alt><s>
Tab	---	<Shift><▶>	<Shift><▶>

This page is intentionally blank.

Chapter 4 • Error Message Resolution Guide

Twin Client Error Message Resolution Guide

Message	Reason	Solution	Reference Tech Note
ENTRY TOO LONG;	Trying to key beyond the field size.	Ensure that you are entering input into the correct field.	---
ALPHABETIC ONLY;	Trying to key a character that is not alphabetic.	Ensure that you are entering input into the correct field.	---
MINUS NOT VALID;	Trying to key a Minus sign.	Ensure that you are entering input into the correct field.	---
DECIMAL NOT VALID;	Trying to key a Decimal (period).	Ensure that you are entering input into the correct field.	---
ALPHANUMERIC ONLY;	Trying to key characters other than Alphabetic and numeric.	Ensure that you are entering input into the correct field.	---
NUMERIC ONLY;	Trying to key characters other than numeric.	Ensure that you are entering input into the correct field.	---
ENTRY TOO SHORT;	Trying to exit the field before it is filled.	Ensure that you are entering input into the correct field.	---

Message	Reason	Solution	Reference Tech Note
INVALID KEY;	The key pressed is not valid.	Ensure that you are entering input into the correct field.	---
MUST CLEAR FIELD;	Trying to enter data in a field that must be cleared first.	Ensure that you are entering input into the correct field.	---
SCAN NOT ALLOWED;	Trying to scan into a key only field.	Ensure that you are entering input into the correct field.	---
KEY NOT ALLOWED;	Trying to key into a scan only field.	Ensure that you are entering input into the correct field.	---
ENTRY TOO SHORT;	Trying to exit the field before it is filled.	Ensure that you are entering input into the correct field.	---
RECOVERABLE ERROR;	Encountered an error from which you can continue.	Verify that your configuration settings for the hardware being used, usually a printer and cable issue.	---
UNRECOVERABLE ERROR;	Encountered an error from which you can NOT continue.	Verify that your Network settings are correct and you are in the correct mode using the correct Port.	T1113, T1114, T1161, T1171, T1187 and T1194
FUNCTION: \n\nFILE: \nLINE: \nCODE;	Encountered an error from which you can NOT continue.	Notify Connect over the WEB incident reporting system.	---
Press any key\nFor More Details...;	Press Enter for more information.	Advisory message.	---
Press any key;	Press a key to continue.	Advisory message.	---

Message	Reason	Solution	Reference Tech Note
Connection ERROR.\nREBOOT MOBILE UNIT;	Could not Connect.	Verify that your Network settings are correct and you are in the correct mode using the correct Port.	T1113, T1114, T1161, T1171, T1187 and T1194
Disconnect ERROR.\nREBOOT MOBILE UNIT;	Could not Disconnect.	Verify that your Network settings are correct and you are in the correct mode using the correct Port.	T1113, T1114, T1161, T1171, T1187 and T1194
RF Send ERROR.\nREBOOT MOBILE UNIT;	Could not Send.	Most likely a range, access point, radio, host or network issue. Troubleshoot the customer's environment.	T1113, T1114, T1161, T1171, T1187 and T1194
RF Receive ERROR.\nREBOOT MOBILE UNIT;	Could not Receive.	Most likely a range, access point, radio, host or network issue. Troubleshoot the customer's environment.	T1113, T1114, T1161, T1171, T1187 and T1194
RF Check ERROR.\nREBOOT MOBILE UNIT;	Could not run the RF Survey.	Most likely a range, access point, radio, host or network issue. Troubleshoot the customer's environment.	T1113, T1114, T1161, T1171, T1187 and T1194
RF Timeout ERROR.\nREBOOT MOBILE UNIT;	Have been trying to contact the host for the radio timeout period (2 minutes default).	Most likely a range, access point, radio, host or network issue. Troubleshoot the customer's environment.	T1113, T1114, T1161, T1171, T1187 and T1194
REBOOT MOBILE UNIT;	Reboot the Mobile Unit do to loss of connection.	Most likely a range, access point, radio, host or network issue. Troubleshoot the customer's environment.	T1113, T1114, T1161, T1171, T1187 and T1194
Retry (Y/N)?;	Try again.	Try to send or receive again, or perhaps ensure that the printer is cabled to the Mobile Unit and is on.	---

Message	Reason	Solution	Reference Tech Note
TIMEOUT\n\nSending Data;	Mobile Unit out of the coverage area.	Most likely a range, access point, radio, host or network issue. Troubleshoot the customer's environment.	T1113, T1114, T1161, T1171, T1187 and T1194
TIMEOUT\n\nReceiving Data;	Mobile Unit out of the coverage area.	Most likely a range, access point, radio, host or network issue. Troubleshoot the customer's environment.	T1113, T1114, T1161, T1171, T1187 and T1194
Host Received Data\nAwaiting App Reply!;	Mobile Unit has sent and received an acknowledgement from the IP stack and is waiting for the application to return data.	Most likely a host or network issue. Troubleshoot the customer's environment. Probable causes are Database record locking, application program failure, Host failure or network failure.	T1113, T1114, T1161, T1171, T1187 and T1194
* WAITING TO SEND *;	Mobile Unit out of the coverage area.	Most likely a range, access point, radio, host or network issue. Troubleshoot the customer's environment.	T1113, T1114, T1161, T1171, T1187 and T1194
TCP Error Reading\nMAC Address.\nREBOOT MOBILE UNIT;	Could not obtain the Mac Address from the Mobile Unit.	Possible hardware, driver or stack problem Contact the Mobile Unit manufacturer.	---
Invalid TIP Command;	Bad internal protocol.	Notify Connect over the WEB incident reporting system.	---
Session Ended\nBy User or Host;	User, Host, application or network has ended the session.	If the user did not end the session, most likely host or network issues. Troubleshoot the customer's environment.	T1113, T1114, T1161, T1171, T1187 and T1194
Server Packet Error;	Bad Protocol detected.	Usually a result of bad cabling, power or faulty transceiver. Also, will receive this if the Mobile Unit is in the wrong mode for server operation.	---

Message	Reason	Solution	Reference Tech Note
Error receiving host\nlist from Server;	Bad Protocol detected.	Usually a result of bad cabling, power or faulty transceiver. Also, will receive this if the Mobile Unit is in the wrong mode for server operation.	---
Unexpected Server\ndata received;	Bad Protocol detected.	Usually a result of bad cabling, power or faulty transceiver. Also, will receive this if the Mobile Unit is in the wrong mode for server operation.	---
Error starting\nhost application;	Connected to the server but can not connect to the distant end.	Configure the server handler to access the host application.	---
Select Host or App;	Need to choose your Host/application destination.	User selection required.	---
Connecting...;	Attempting to connect to the Host/application.	Advisory message.	---
TCP Error\nReading IP Address\nREBOOT MOBILE UNIT;	Mobile Unit missing Network IP information.	Configure the Mobile Unit with the correct network IP information.	---
Printer start error;	Could not initialize the printer.	Cable or power issue with the printer.	---
Battery too low\nto print;	Not enough power to print.	Replace the battery with a fully recharged battery.	---
Paper Feed Error\nFix Then Hit Enter;	Paper in the printer is not ready.	Replace the paper or rethread the paper in the printer.	---
Printer Error\nPrint Ended;	Can not print.	Check cable, battery, communication settings and paper in the printer.	---

Message	Reason	Solution	Reference Tech Note
User Count Exceeded.\n Session Ended;	Possible authorization issue.	Verify that you have the correct number of licenses for the number of Mobile Units you are using.	---
Primary Unavailable\nTrying Alternate;	First Host IP address not available trying the remaining addresses in the Host list.	Verify the host address.	---
APMAC.DAT Error\nSession Ended;	Access point Media Access Control error.	Most likely a range, access point, radio, host or network issue. Troubleshoot the customer's environment.	T1113, T1114, T1161, T1171, T1187 and T1194
MUIP.DAT Error\nSession Ended;	Mobile Unit IP Error.	Most likely a Mobile Unit network setting issue. Troubleshoot the customer's environment.	T1113, T1114, T1161, T1171, T1187 and T1194
Missing Subnet IP\nSession Ended;	Mobile Unit IP Netmask Error.	Most likely a Mobile Unit network setting issue. Troubleshoot the customer's environment.	T1113, T1114, T1161, T1171, T1187 and T1194
Error Opening File;	File is missing.	Verify that the configuration files are on the Mobile Unit. Or perhaps there is a hardware failure.	---
Telnet API\nnot found;	Program files are missing.	Reload program files.	---
Battery Low Warning\n\nReplace Battery Soon;	Not enough power to operate the Mobile Unit.	Replace the battery with a fully recharged battery.	---
No Host List.\nPress any key\nTo Edit Host IP's;	Have not configured your target hosts.	Configure the target host IP addresses.	---
Unable to Allocate\nFont Memory;	Mobile Unit does not have enough memory to load the fonts.	Reduce the fonts in use or expand the memory in the Mobile Unit.	---

Message	Reason	Solution	Reference Tech Note
Font Loading Error;	Could not load the font.	Ensure that the font is available to load.	---
Printer Not Ready\nPress R to Retry\nC to Cancel Print;	Can not print.	Check cable, battery, communication settings and paper in the printer.	---
Mobile Unit in\nDemonstration Mode\nfor TwinClient;	Running in demo mode.	Purchase a license from Connect.	---
Connected to Host;	Successful connection to the target Host.	Advisory message.	---
Telnet Mode not\nsupported on\nthis Mobile Unit;	This Mobile Unit must be used with a Connect Server.	Order a Connect Server.	---
Telnet Setup files\nnot found. Reload\nfiles then switch;	Customer specific configuration files are missing.	Load the configuration files into the Mobile Unit from Twin Client Manager.	---
Switched Client to\nTelnet Direct Mode;	Mobile Unit running in Telnet mode direct to the target Host.	Advisory message.	---
Switched Client to\nServer Based Mode;	Mobile Unit running through a Connect server in Server mode usually at port 1800.	Advisory message.	---
Port 23 is only\nallowed in Telnet Mode;	Can not set the port to 23 in Server mode. Port 23 is the standard Telnet port.	Advisory message.	---
Not Enough Memory\nTo Run;	Mobile Unit does not have the capacity to run the program do to memory restrictions.	Expand the Mobile Unit memory.	---
Press any key;	Press a key to continue.	Advisory message.	---

Message	Reason	Solution	Reference Tech Note
TwinClient Telnet;	Prompt.	Advisory message.	---
TwinClient Server;	Prompt.	Advisory message.	---
TwinClient TN3270;	Prompt.	Advisory message.	---
TwinClient TN5250;	Prompt.	Advisory message.	---
TwinClient TNVT;	Prompt.	Advisory message.	---
(c) 1991-2006 Connect;	Prompt.	Advisory message.	---
Edit Menu Options;	Menu Title.	Advisory message.	---
Edit Mobile Unit IP;	Menu Option.	Advisory message.	---
Edit Server/Host IPs;	Menu Option.	Advisory message.	---
Edit Radio Option;	Menu Option.	Advisory message.	---

Message	Reason	Solution	Reference Tech Note
Edit License Key;	Menu Option.	Advisory message.	---
Run Site Survey;	Menu Option.	Advisory message.	---
Switch Client Modes;	Menu Option.	Advisory message.	---
Run TwinClient;	Menu Option.	Advisory message.	---
Exit to OS;	Menu Option.	Advisory message.	---
Printer may not be plugged in or turned on!	Can not print.	Check cable, battery, communication settings and paper in the printer.	---
OUT OF RANGE OF BASE;	Mobile Unit out of the coverage area.	Most likely a range, access point, radio, host or network issue. Troubleshoot the customer's environment.	T1113, T1114, T1161, T1171, T1187 and T1194
CONNECT SERIAL CABLE;	Serial cable not connected to the Mobile Unit.	Check cable, battery and communication settings for the Mobile Unit.	---
REMOVE SERIAL CABLE;	Remove serial cable from to the Mobile Unit.	Check cable, battery and communication settings for the Mobile Unit.	---
PLACE IN CRADLE;	Place the Mobile Unit in the cradle.	Advisory message.	---

Message	Reason	Solution	Reference Tech Note
REMOVE FROM CRADLE;	Remove Mobile Unit from the cradle.	Advisory message.	---
ACQUIRING CRADLE BUS;	Attempting to access the cradle through the serial port you have configured.	Advisory message.	---
Printer Out\nOf Range;	Printer out of the coverage area.	Most likely a range, access point or radio issue. Troubleshoot the customer's environment.	T1113, T1114, T1161, T1171, T1187 and T1194
Connection Refused\nBy Host;	You connected to the target host but the host disconnected you.	Verify that the configuration file has the correct Mobile Unit type and New environment variable set. Fallback to the Connect Default to verify the connection.	---
Connection Timed Out;	You connected to the host but did not logon in the appropriate time so the host disconnected you.	Modify the Host parameters for login.	---
Connection Failed\nHost Not Responding;	Could not connect to the Host.	Most likely a range, access point, radio, host or network issue. Troubleshoot the customer's environment.	T1113, T1114, T1161, T1171, T1187 and T1194
Connection Failed\nHost Unreachable;	Could not connect to the Host.	Most likely a range, access point, radio, host or network issue. Troubleshoot the customer's environment.	T1113, T1114, T1161, T1171, T1187 and T1194
Mobile Unit Out\nOf Range, Unable\nTo Transmit;	Mobile Unit out of the coverage area.	Most likely a range, access point, radio, host or network issue. Troubleshoot the customer's environment.	T1113, T1114, T1161, T1171, T1187 and T1194
Mobile Unit Out\nOf Range, Unable\nTo Receive;	Mobile Unit out of the coverage area.	Most likely a range, access point, radio, host or network issue. Troubleshoot the customer's environment.	---

Message	Reason	Solution	Reference Tech Note
Printer Not Responding;	Can not print.	Check cable, battery, communication settings and paper in the printer.	---
Printer Out Of Range;	Printer out of the coverage area.	Most likely a range, access point or radio issue. Troubleshoot the customer's environment.	T1113, T1114, T1161, T1171, T1187 and T1194
Print Complete;	Prompt.	Advisory message.	---
Reprint (Y/N)?;	Yes or No prompt for a reprint.	Advisory message.	---
WARNING;	Prompt.	Advisory message.	---
Turning power off during a session will cause the program to restart;	This Mobile Unit will disconnect the session if powered off.	Mobile Unit manufacturer limitation. Advisory message.	---
Are you sure (y/n)?;	Yes or No prompt for a confirmation.	Advisory message.	---
You Sure? (YyNn);	Yes or No prompt for a confirmation.	Advisory message.	---
Domain Name Server Not Set;	DOMAIN NAME SERVER not configured.	Configure the Mobile Unit with the correct network IP information.	---
Domain Name Server Query Memory Error;	Memory error on the Mobile Unit	Expand the Mobile Unit memory or return the Mobile Unit for repair.	---

Message	Reason	Solution	Reference Tech Note
Domain Name Server\nQuery Sending Error;	Mobile Unit out of the coverage area.	Most likely a range, access point, radio, host or network issue. Troubleshoot the customer's environment.	T1113, T1114, T1161, T1171, T1187 and T1194
Domain Name Server\nQuery Receive Error;	Mobile Unit out of the coverage area.	Most likely a range, access point, radio, host or network issue. Troubleshoot the customer's environment.	T1113, T1114, T1161, T1171, T1187 and T1194
Domain Name Server\nUnavailable;	Could not connect to the DOMAIN NAME SERVER.	Most likely a range, access point, radio, host or network issue. Troubleshoot the customer's environment.	T1113, T1114, T1161, T1171, T1187 and T1194
Error loading\nparameter file;	Could not load the parameter file.	Reload the correct configuration files.	---
Could not open\nTelnet interface;	Could not Telnet.	Reload the program files.	---
Could not set\nTelnet options;	Could not use the Telnet configuration.	Reload the correct configuration files.	---
Setup file\nsetting mismatch\nReload Setup;	Emulation program selected is not compatible with the configuration file on the Mobile Unit.	Remove the emulation and configuration files. Run clear Telnet on the Mobile Unit then reload the Mobile Unit with the proper emulation and configuration files.	---
Display formatting\ntoo large for\ncurrent screen;	Mobile Unit does not have enough memory to run your configured reformatted screens.	Expand the Mobile Unit memory or order a server from Connect.	---
Mobile Unit\ninitialization error;	Mobile Unit problem.	Return the Mobile Unit to the manufacturer for repair.	---

Message	Reason	Solution	Reference Tech Note
Host/App/Network\nclosed the session;	Customer's environment disconnected the Mobile Unit session.	Most likely a range, access point, radio, host or network issue. Troubleshoot the customer's environment.	T1113, T1114, T1161, T1171, T1187 and T1194
Disconnecting...;	Prompt.	Advisory message.	---
Scan Barcode;	Bar code scanning test.	Advisory message.	---
Enter Setup\nPassword;	Prompt.	Advisory message.	---
Enter Profile \nPassword;	Prompt.	Advisory message.	---
Host IP;	Host IP address prompt.	Enter target host IP address.	---
Host Name;	Host name prompt.	Enter target host Name.	---
Port;	Host IP port required.	Enter 23 for Telnet or 1800 for a Connect server. Could also be a different number depending on the customer's environment.	T1113, T1114, T1161, T1171, T1187 and T1194
Mobile Unit Type;	Prompt.	Advisory message.	---
WARNING: This will \nend any\nccurrent session;	Prompt.	Advisory message.	---

Message	Reason	Solution	Reference Tech Note
Continue (Y/N)?;	Prompt.	Advisory message.	---
HOST ENTRY;	Prompt.	Advisory message.	---
VT(100/220) Setup;	Prompt.	Advisory message.	---
Mobile Unit Info;	Prompt.	Advisory message.	---
Emulation Setup;	Prompt.	Advisory message.	---
ANSI Setup;	Prompt.	Advisory message.	---
Miscellaneous Setup;	Prompt.	Advisory message.	---
Mobile Unit Type;	Prompt.	Advisory message.	---
Control Codes;	Prompt.	Advisory message.	---
Local Echo;	Prompt.	Advisory message.	---

Message	Reason	Solution	Reference Tech Note
<BK SP> Sends;	Prompt.	Advisory message.	---
New Line Mode;	Prompt.	Advisory message.	---
Insert Mode;	Prompt.	Advisory message.	---
Autowrap Mode;	Prompt.	Advisory message.	---
Cursor;	Prompt.	Advisory message.	---
EMULATION SETUP;	Prompt.	Advisory message.	---
Mobile Unit Type;	Prompt.	Advisory message.	---
Local Echo;	Prompt.	Advisory message.	---
Map Underline;	Prompt.	Advisory message.	---
Break Key;	Prompt.	Advisory message.	---

Message	Reason	Solution	Reference Tech Note
ANSI Setup;	Prompt.	Advisory message.	---
Control Codes;	Prompt.	Advisory message.	---
Backspace Key;	Prompt.	Advisory message.	---
MISCELLANEOUS SETUP;	Prompt.	Advisory message.	---
Test Options;	Prompt.	Advisory message.	---
Login Options;	Prompt.	Advisory message.	---
TEST OPTIONS;	Prompt.	Advisory message.	---
Printer Test;	Prompt.	Advisory message.	---
Scan Code Test;	Prompt.	Advisory message.	---
LOGIN OPTIONS;	Prompt.	Advisory message.	---

Message	Reason	Solution	Reference Tech Note
User Name;	Prompt.	Advisory message.	---
User Password;	Prompt.	Advisory message.	---
ON;	Prompt.	Advisory message.	---
OFF;	Prompt.	Advisory message.	---
Map;	Prompt.	Advisory message.	---
Don't Map;	Prompt.	Advisory message.	---
Enable Break;	Prompt.	Advisory message.	---
Disable Break;	Prompt.	Advisory message.	---
7 bit;	Prompt.	Advisory message.	---
8 bit;	Prompt.	Advisory message.	---

Message	Reason	Solution	Reference Tech Note
Send Delete;	Prompt.	Advisory message.	---
Send Backspace;	Prompt.	Advisory message.	---
Mobile Unit Setup;	Prompt.	Advisory message.	---
Scanner Options;	Prompt.	Advisory message.	---
Program Options;	Prompt.	Advisory message.	---
Special Options;	Prompt.	Advisory message.	---
Beeper Options;	Prompt.	Advisory message.	---
Exit to DOS;	Prompt.	Advisory message.	---
Backlight Time;	Prompt.	Advisory message.	---
Enter Key Action;	Prompt.	Advisory message.	---

Message	Reason	Solution	Reference Tech Note
Reset Options;	Prompt.	Advisory message.	---
Font Size;	Prompt.	Advisory message.	---
Portable Printer;	Prompt.	Advisory message.	---
Reprint Option;	Prompt.	Advisory message.	---
Data IDs;	Prompt.	Advisory message.	---
Internal/External;	Prompt.	Advisory message.	---
Modify Beeps;	Prompt.	Advisory message.	---
Message Beeps;	Prompt.	Advisory message.	---
Scan Identifier;	Prompt.	Advisory message.	---
AID Scan Setup;	Prompt.	Advisory message.	---

Message	Reason	Solution	Reference Tech Note
Long Scans;	Prompt.	Advisory message.	---
Scan Send;	Prompt.	Advisory message.	---
Yes;	Prompt.	Advisory message.	---
No;	Prompt.	Advisory message.	---
Normal;	Prompt.	Advisory message.	---
Double Wide;	Prompt.	Advisory message.	---
Double High;	Prompt.	Advisory message.	---
Double High and Wide;	Prompt.	Advisory message.	---
Errors Only;	Prompt.	Advisory message.	---
Automatic;	Prompt.	Advisory message.	---

Message	Reason	Solution	Reference Tech Note
All Messages;	Prompt.	Advisory message.	---
Reject;	Prompt.	Advisory message.	---
Truncate;	Prompt.	Advisory message.	---
Split;	Prompt.	Advisory message.	---
Do Not Send;	Prompt.	Advisory message.	---
Always Send;	Prompt.	Advisory message.	---
Last Field Only;	Prompt.	Advisory message.	---
Internal;	Prompt.	Advisory message.	---
External;	Prompt.	Advisory message.	---
none;	Prompt.	Advisory message.	---

Message	Reason	Solution	Reference Tech Note
monarch;	Prompt.	Advisory message.	---
pddumb;	Prompt.	Advisory message.	---
comtec;	Prompt.	Advisory message.	---
rascal;	Prompt.	Advisory message.	---
codewriter;	Prompt.	Advisory message.	---
comtec(S);	Prompt.	Advisory message.	---
User Name;	Prompt.	Advisory message.	---
Password;	Prompt.	Advisory message.	---
Frequency: Hz;	Prompt.	Advisory message.	---
Duration: ms;	Prompt.	Advisory message.	---

Message	Reason	Solution	Reference Tech Note
Delay: ms;	Prompt.	Advisory message.	---
Select Scanner;	Prompt.	Advisory message.	---
Setup Scanner;	Prompt.	Advisory message.	---
Scan Test;	Prompt.	Advisory message.	---
Scan Operation;	Prompt.	Advisory message.	---
Laser;	Prompt.	Advisory message.	---
Contact/Pulse;	Prompt.	Advisory message.	---
Contact/No Pulse;	Prompt.	Advisory message.	---
Auto/Pulse;	Prompt.	Advisory message.	---
Auto/No Pulse;	Prompt.	Advisory message.	---

Message	Reason	Solution	Reference Tech Note
Wand Simulation;	Prompt.	Advisory message.	---
VT100;	Prompt.	Advisory message.	---
VT220;	Prompt.	Advisory message.	---
SETUP;	Prompt.	Advisory message.	---
Mobile Unit IP/Radio;	Prompt.	Advisory message.	---
Host List;	Prompt.	Advisory message.	---
NULL;	Prompt.	Advisory message.	---